

- (1) Číslo (Put myši zde, jak se zobrazí A / C Name).
- (2)Horsepower
- (3)Mode
- (4)Fan Speed (When A/C is OFF, Fan Speed is "Stop".)
- (5)Room Temp. T1
- (6)Set Temp. Ts
- (7)Timer ON
- (8)Timer OFF
- (9)Lock Function
- (10) Swing Function
- (11) Error Code (Put mouse here, it will display Error contents.)
- (12) Protection Code (Put mouse here, it will display Protection contents.)
- (13) Other Parameter (Click it, one window will pop-up and display information of Electric Expansive Valve)

Při nastavení časovače ON / volno, bude nastavený čas se zobrazí na časovač ON a Timer OFF v rámci státu, A / C. Při ukončení provádění sadu časovače ON nebo časovač VYP, Odpovídající nastaveného času zmizí.

Kód chyby a chránit kód jsou následující:

ERROR Code	ERROR Contents	PROTECT . Code	PROTECT. Contents
EF	Ostatní závady	PF	Other Protection
EE	Kontrola porucha hladiny vody	PE	Reserve
ED	Venkovní ochrana	PD	Reserve
EC	Clear závadu	PC	Reserve
EB	Inverter Module Protection	PB	Reserve
EA	Compressor Over-current (4 times)	PA	Reserve
E9	Communication malfunction between PCB and Display board	P9	Reserve
E8	Fan motor checking out of control	P8	Compressor Over-current
E7	EEPROM malfunction	P7	Power Lack/Over Volt Protection
E6	Over-zero checking malfunction	P6	Discharge Low-pressure Protection
E5	T3(T4) sensor malfunction, Digital Compressor Discharge Temp. Sensor malfunction	P5	Discharge High-pressure Protection
E4	T2B sensor malfunction	P4	Discharge Pipe Temp. Protection
E3	T2A sensor malfunction	P3	Compressor Temp. Protection
E2	T1 sensor malfunction	P2	Condenser High Temp. Protection
E1	Communication malfunction	P1	Anti-cooling or Defrost Protection
E0	Phase sequence error or lack of phase	P0	Evaporator Temp. Protection

## 2) A/C Set

"Y / N" se používá pro nastavení času k otevření nebo vypnout vnitřních jednotek. Prosím, nevybírejte ji

Při obecné nastavení zapnout nebo vypnout. A / C sada se skládá ze dvou částí:

**(1) General Set** (nezaškrtnete "Y / N") patří: A / C ON / OFF, dálkové ovládání zamykání / odemykání nebo ne si vybrat, Swing ON / OFF nebo ne si vybrat, režim, rychlost ventilátoru, SET TEMP. klikněte

"Odeslat", bude odesílat vybrané parametry

- ◆ Tick "Remote Lock", it will send order of "Remote Lock".
- ◆ Tick "Remote Unlock", it will send order of "Remote Unlock".
  
- ◆ Tick "Swing ON", it will send order of "Swing ON".
- ◆ Tick "Swing OFF", it will send order of "Swing OFF".
  
- ◆ Every time when sending general parameters to set ON (or change parameters), the following parameters need to be set (do not tick "Y/N"): ON, Swing ON/OFF, Mode, Fan Speed, Set Temp. , (Remote Control can be selected according to requirement.).
- ◆ Every time when sending general parameters to set OFF, the following parameters need to be set (do not tick "Y/N"): OFF.

#### **Procedures for setting ON:**

1. Select either "Remote Lock" or "Remote Unlock".
2. Select "ON"
3. Select either "Swing ON" or "Swing OFF".
4. Select "Mode".
5. Select "Fan speed".
6. Select "Set Temp.".
7. Click "Send" and complete the setting.

#### **Procedures for shutdown:**

1. Select either "Remote Lock" or "Remote Unlock".
2. Select "OFF".
3. Click "Send" and complete the setting.

#### **(2) Timer ON/OFF set (do tick "Y/N")**

For Timer ON/OFF set, when clicking "Send", it doesn't send order at once but save the setting information, then send it when it is time to Timer ON/OFF.

- ◆ "Timer ON" needs to set: Timer ON, Swing ON/OFF or not select, Mode, Fan Speed, Set Temp. (Remote Control can be selected according to requirement.).
- ◆ "Timer OFF" needs to set: Timer OFF.
- ◆ Timer ON/OFF set must select "Y/N", need not set "ON/OFF" symbol.
- ◆ Click "Send", the parameters of Timer ON/OFF will be saved, the "✓" of "Y/N" disappear at the same time, and the set window will restore to general parameter set status. Timer ON/OFF will be carried out when set time arrives. And the time parameters of Timer ON/OFF will be displayed at "Timer ON" and "Timer OFF" under A/C State after finishing setting, and will disappear after the information is carried out.
- ◆ When needing to change ON/OFF setting, select "Y/N", input the parameters again, and click "send".