

ERROR CONTENTS

○ : Fast flashing ● : Slow flashing

Operation lamp : Red lamp

Timer lamp : Green lamp

INDOOR UNIT

Large division indication			Small division indication		
Error contents	LED indication		Error contents	LED indication	
Thermistor error (indoor unit)	Red lamp Green lamp	● (2 times) ○	Thermistor error (room temp.)	Red lamp	○
				Green lamp	● (2 times)
			Thermistor error (heat exchanger)	Red lamp	○
				Green lamp	● (3 times)
Control unit error (indoor unit)	Red lamp Green lamp	● (4 times) ○	MANUAL AUTO button error	Red lamp	○
				Green lamp	● (2 times)
			Power source Hz decision error	Red lamp	○
				Green lamp	● (4 times)
Serial error	Red lamp Green lamp	● (5 times) ○	Serial reverse transmission error	Red lamp	○
				Green lamp	● (2 times)
			Serial order transmission error	Red lamp	○
				Green lamp	● (3 times)
Fan motor error (indoor unit)	Red lamp Green lamp	● (6 times) ○	Lock error	Red lamp	○
				Green lamp	● (2 times)
			r.p.m error	Red lamp	○
				Green lamp	● (3 times)
Thermistor error (outdoor unit)	Red lamp Green lamp	○ ● (2 times)	Discharge thermistor error	Red lamp	● (2 times)
				Green lamp	○
			Heat exchanger thermistor error	Red lamp	● (4 times)
				Green lamp	○
			Outdoor temperature thermistor error	Red lamp	● (6 times)
				Green lamp	○
			Compressor thermistor error	Red lamp	● (8 times)
				Green lamp	○
			2 way valve thermistor error	Red lamp	● (9 times)
				Green lamp	○
			3 way valve thermistor error	Red lamp	● (10 times)
				Green lamp	○
Pressure switch error	Red lamp Green lamp	○ ● (3 times)	Pressure switch error	Red lamp	● (2 times)
				Green lamp	○
Control unit error (outdoor unit)	Red lamp Green lamp	○ ● (4 times)	Capacity error of connecting indoor unit	Red lamp	● (2 times)
				Green lamp	○
Inverter error	Red lamp Green lamp	○ ● (5 times)	Outdoor unit IPM error	Red lamp	● (2 times)
				Green lamp	○
			Compressor loter location error	Red lamp	● (5 times)
				Green lamp	○

When an error occurs, "Large division indication" is indicated first.

Secondly, "Small division indication" is indicated by pushing "Test run" button of remote controller.