



INVERTER SPLIT TYPE
AIR CONDITIONER (50Hz)
DUCT TYPE

SERVICE MANUAL



Indoor unit	Outdoor unit
RDG24LMLA	ROG24LALA

CONTENTS

SPECIFICATIONS.....	1
DIMENSIONS.....	2
REFRIGERANT SYSTEM DIAGRAM ...	3
CIRCUIT DIAGRAM.....	4
INDOOR PCB CIRCUIT DIAGRAM.....	5
OUTDOOR PCB CIRCUIT DIAGRAM ...	8
ERROR DETECTION.....	10
PARTS (INDOOR UNIT).....	12
PARTS (OUTDOOR UNIT).....	15
ACCESSORIES.....	17

SPECIFICATIONS

ELECTRICAL DATA

TYPE		Inverter cool & heat
INDOOR UNIT		RDG24LMLA
OUTDOOR UNIT		ROG24LALA
COOLING CAPACITY		6.80 kW
HEATING CAPACITY		8.00 kW
POWER SOURCE		230 V
FREQUENCY		50 Hz
RUNNING CURRENT	Cooling	9.7 A
	Heating	9.9 A
INPUT WATTS	Cooling	2.21 kW
	Heating	2.26 kW
E.E.R.	Cooling	3.08 kW/kW
COP	Heating	3.54 kW/kW
AIR FLOW, INDOOR UNIT		1,100 m3/h
AIR FLOW, OUTDOOR UNIT		2,470 m3/h
MOISTURE REMOVAL		2.5 L/hr
MAXIMUM CURRENT	Cooling	12.0 A
	Heating	13.5 A

FAN SPEED

INDOOR UNIT	Discrimination	MFG-24RVA
	High	830 r.p.m.
	Medium	700 r.p.m.
	Low	600 r.p.m.
	Quiet	550 r.p.m.
OUTDOOR UNIT	Discrimination	MFE-24ROAM
	Cooling	1,050 r.p.m.
	Heating	1,050 r.p.m.

NOISE LEVEL

INDOOR UNIT	High	31 dB
	Medium	29 dB
	Low	27 dB
	Quiet	25 dB
OUTDOOR UNIT	Cooling	52 dB
	Heating	53 dB

COMPRESSOR AND REFRIGERANT

TYPE		Hermetic type, 4 poles
DISCRIMINATION		DA150A1F-20NA
COMPRESSOR WEIGHT (with oil)		10.0 kg
PRECHARGED REFRIGERANT		1,700 g
REFRIGERANT TYPE		R410A
FULL CHARGE	Pipe length 15 m	1,700 g
	20 m	1,800 g
	25 m	1,900 g
	30 m	2,000 g
ADDITIONAL CHARGE		20 g/m
MAXIMUM PIPE HEIGHT		20 m

DIMENSIONS

INDOOR UNIT	H x W x D	270 x 1,135 x 700 mm
OUTDOOR UNIT	H x W x D	570 x 790 x 315 mm


WEIGHT

INDOOR UNIT	Net / Shipping	38 kg / 44 kg
OUTDOOR UNIT	Net / Shipping	44 kg / 48 kg


DIMENSIONS

Unit : mm

INDOOR UNIT

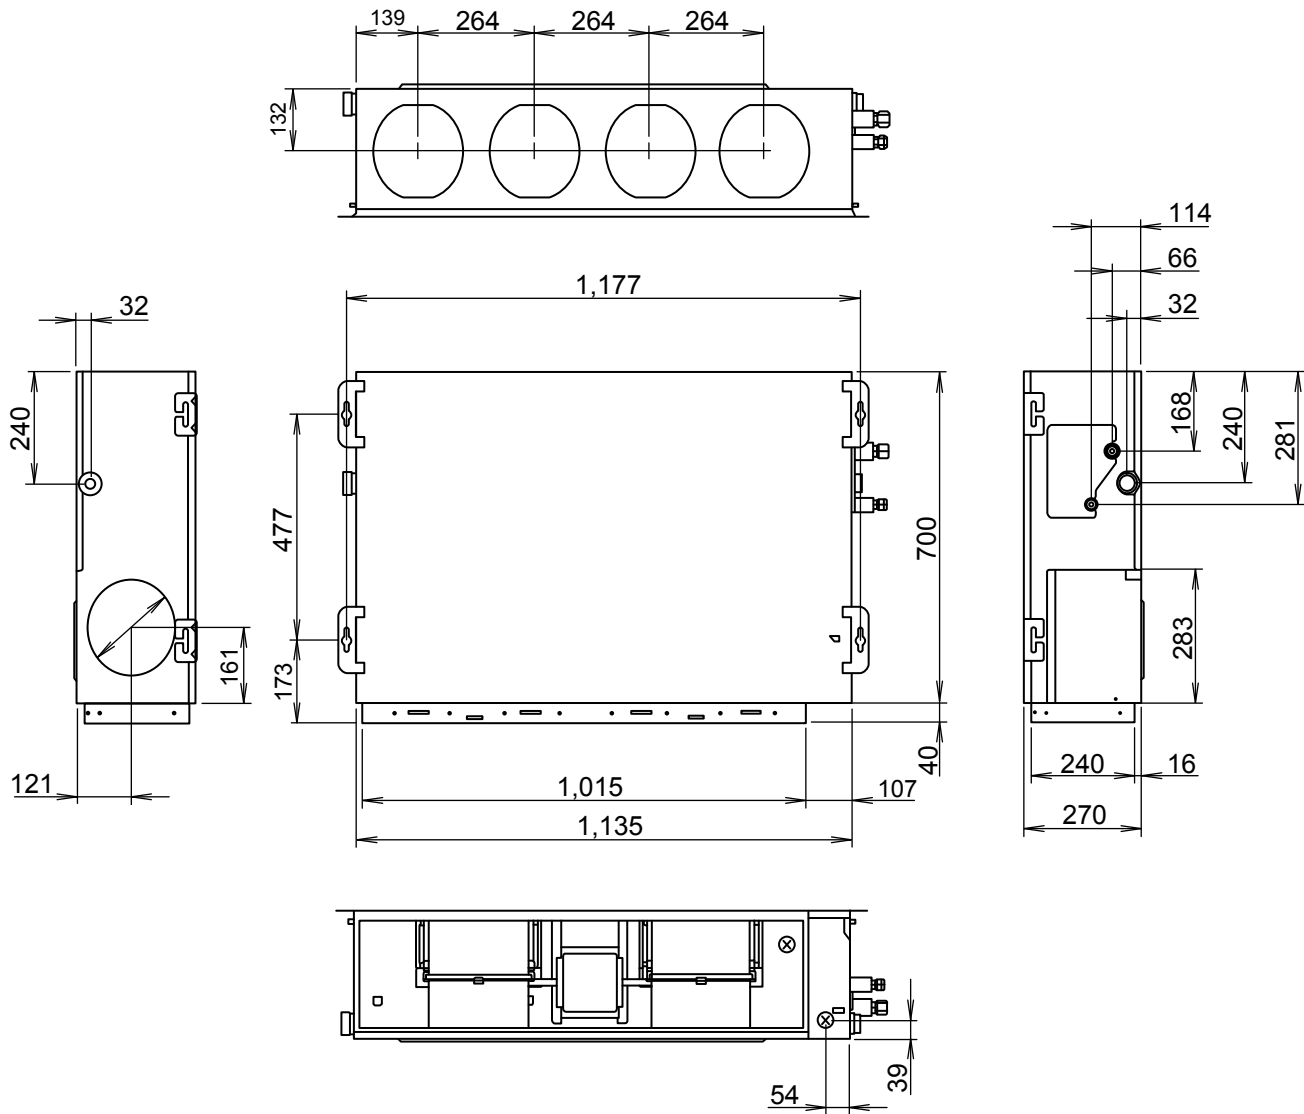


OUTDOOR UNIT

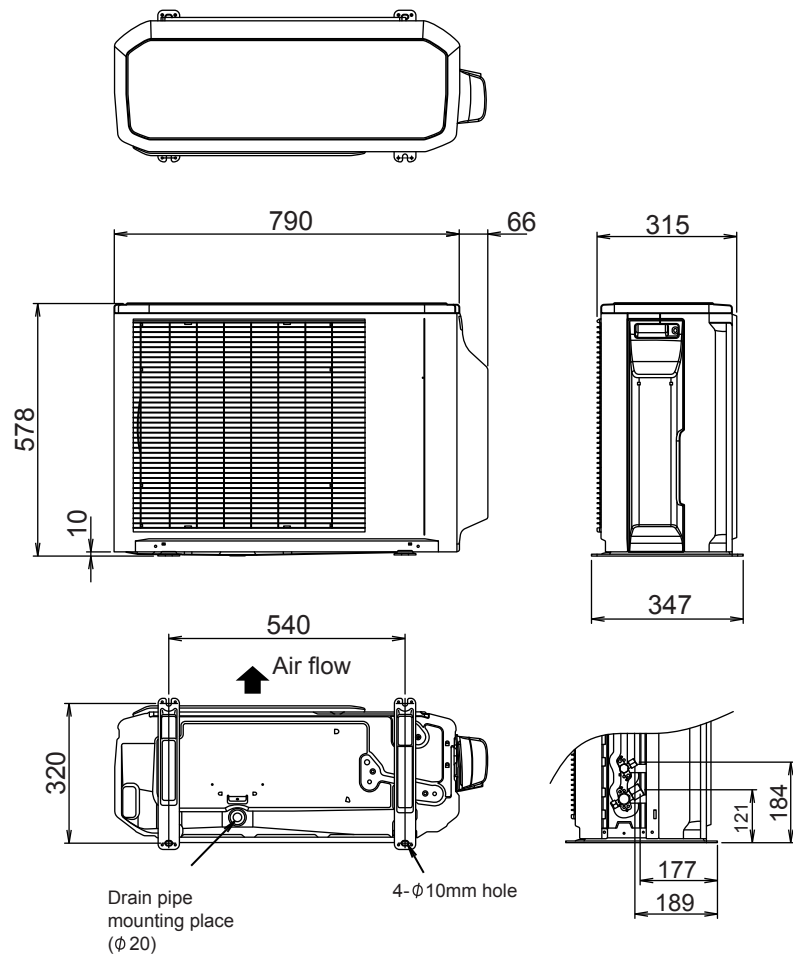

REFRIGERANT SYSTEM DIAGRAM

OUTDOOR UNIT

INDOOR UNIT

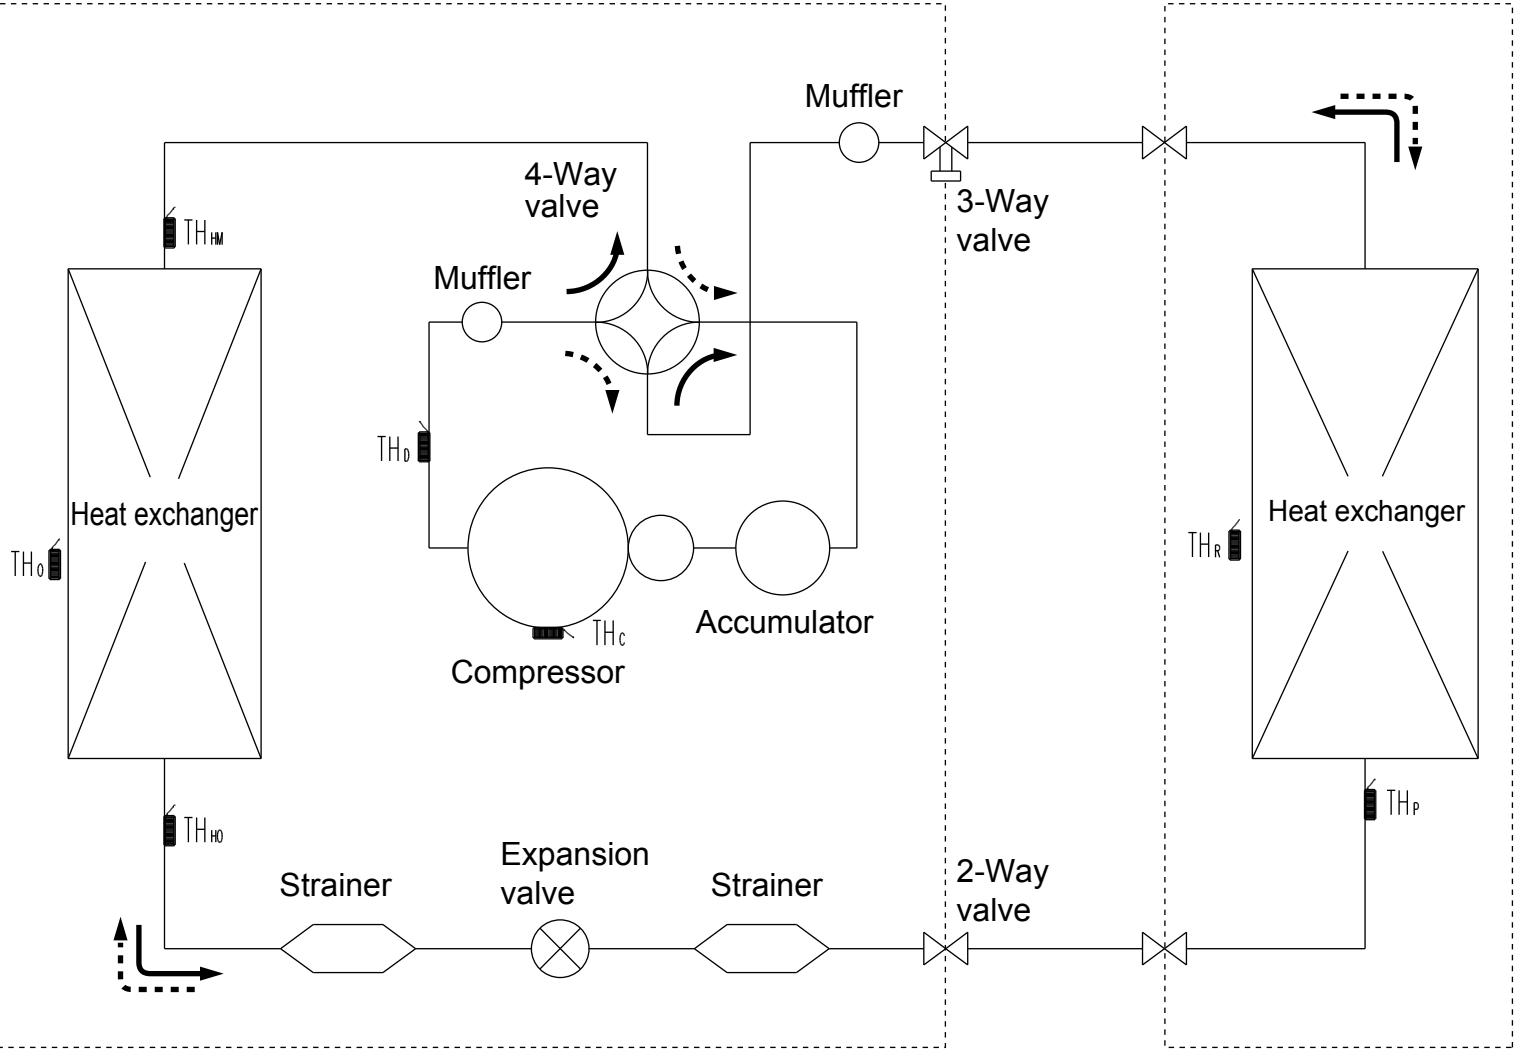

Refrigerant flow

→ Cool
---> Heat

Refrigerant pipe diameter

Liquid : 1/4" (6.35 mm)


Gas : 5/8" (15.88 mm)

TH_C : THERMISTOR (COMPRESSOR TEP.)
TH_D : THERMISTOR (DISCHARGE TEP.)
TH_{HM} : THERMISTOR (HEAT EXCHANGER MED TEP.)
TH_{HO} : THERMISTOR (HEAT EXCHANGER OUT TEP.)
TH_O : THERMISTOR (OUTDOOR TEP.)

TH_P : THERMISTOR (PIPE TEP.)
TH_R : THERMISTOR (ROOM TEP.)


CIRCUIT DIAGRAM

INDOOR UNIT

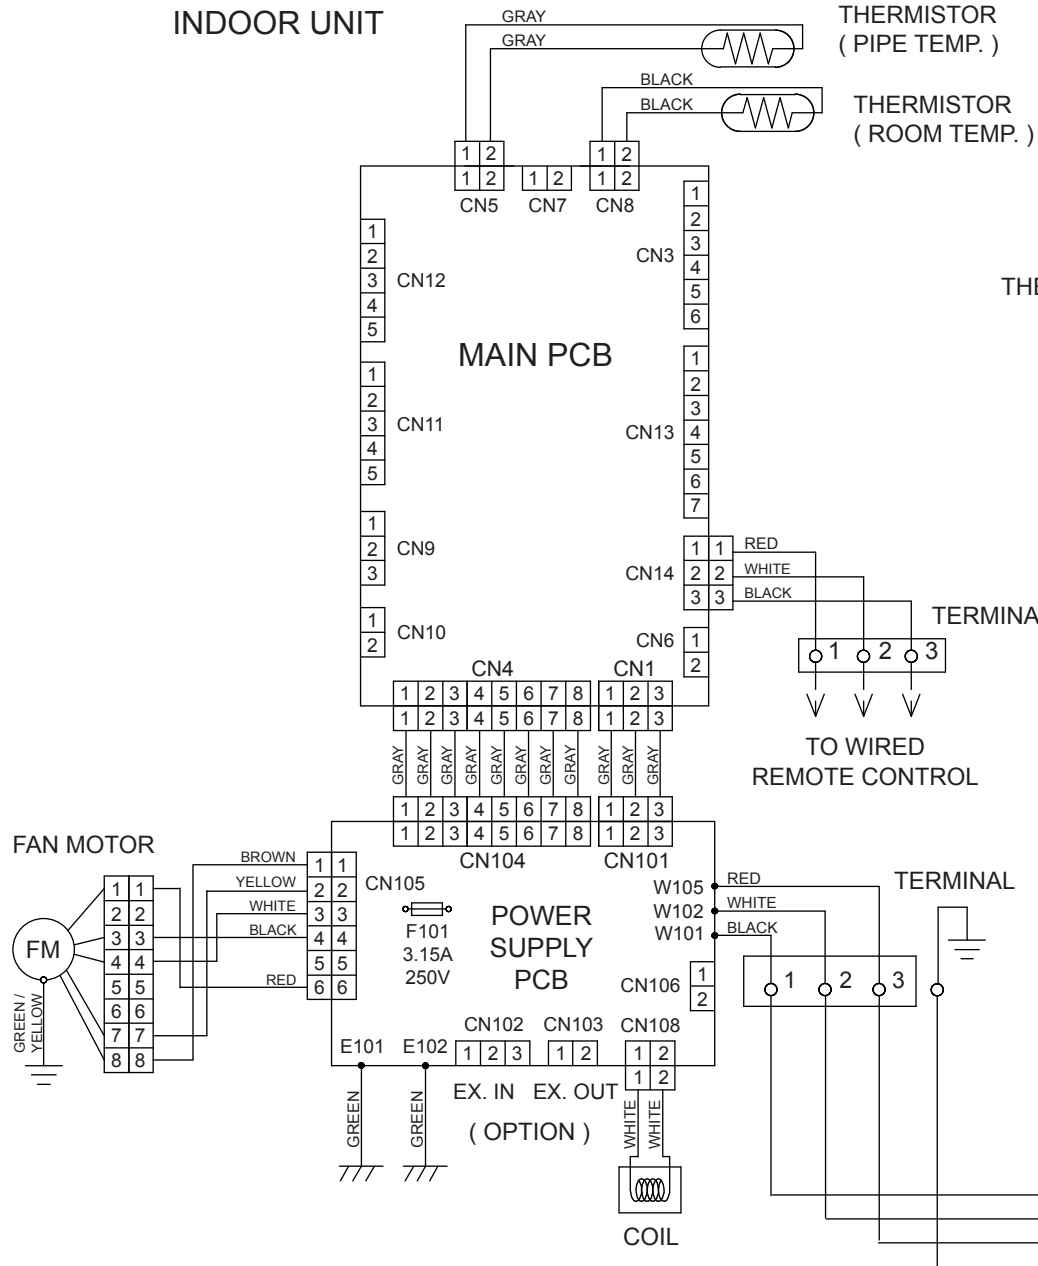


REACTOR


OUTDOOR UNIT

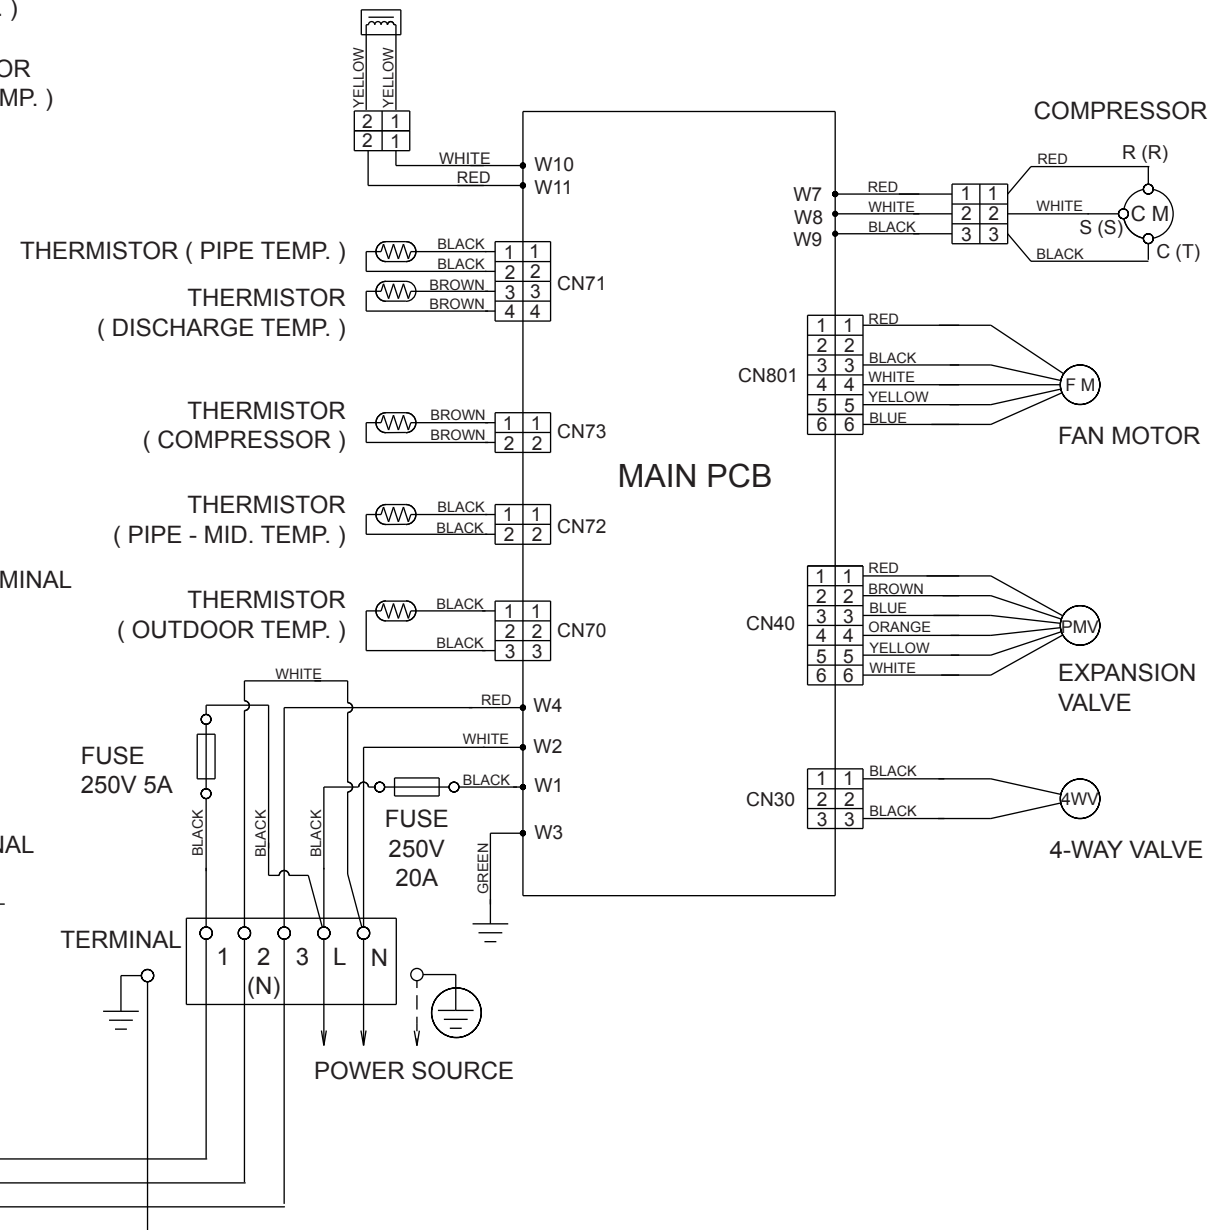


CONTROL UNIT
EZ-01227HSE




INDOOR UNIT
MAIN PCB
K06AK-120SHSE-C1

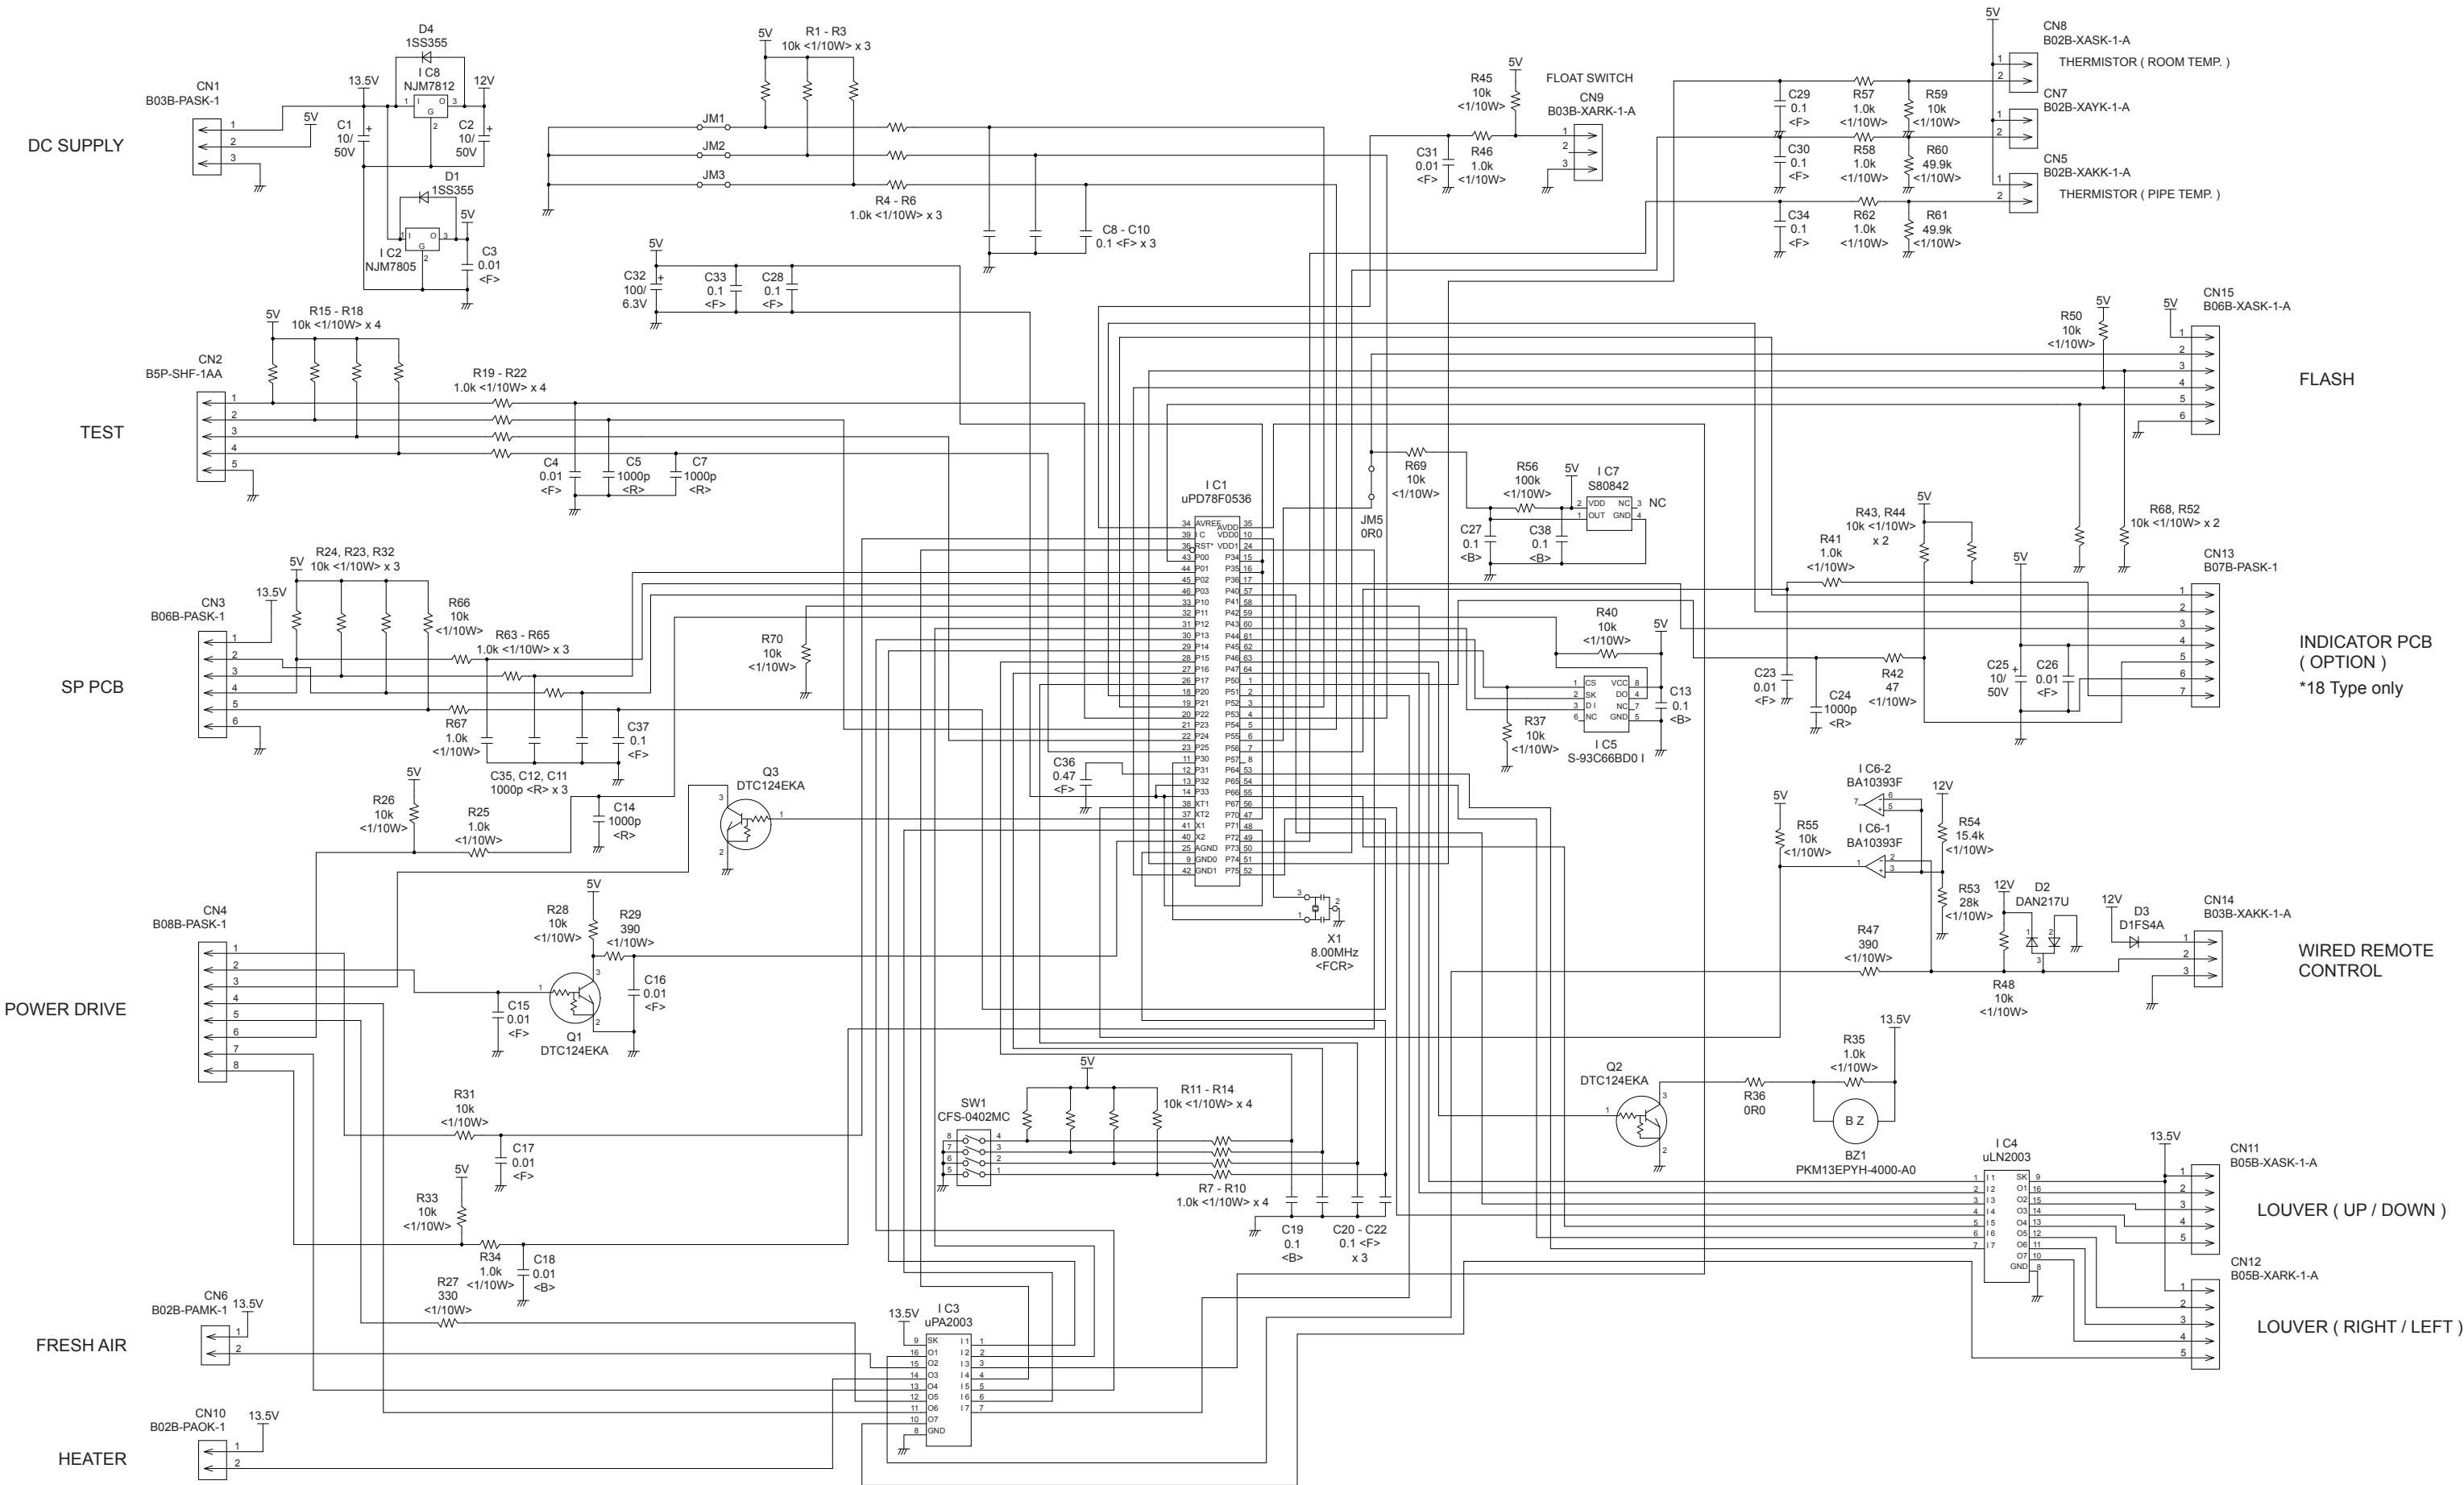



OUTDOOR PCB CIRCUIT DIAGRAM

INVERTER ASSEMBLY
EZ-0121EHUE

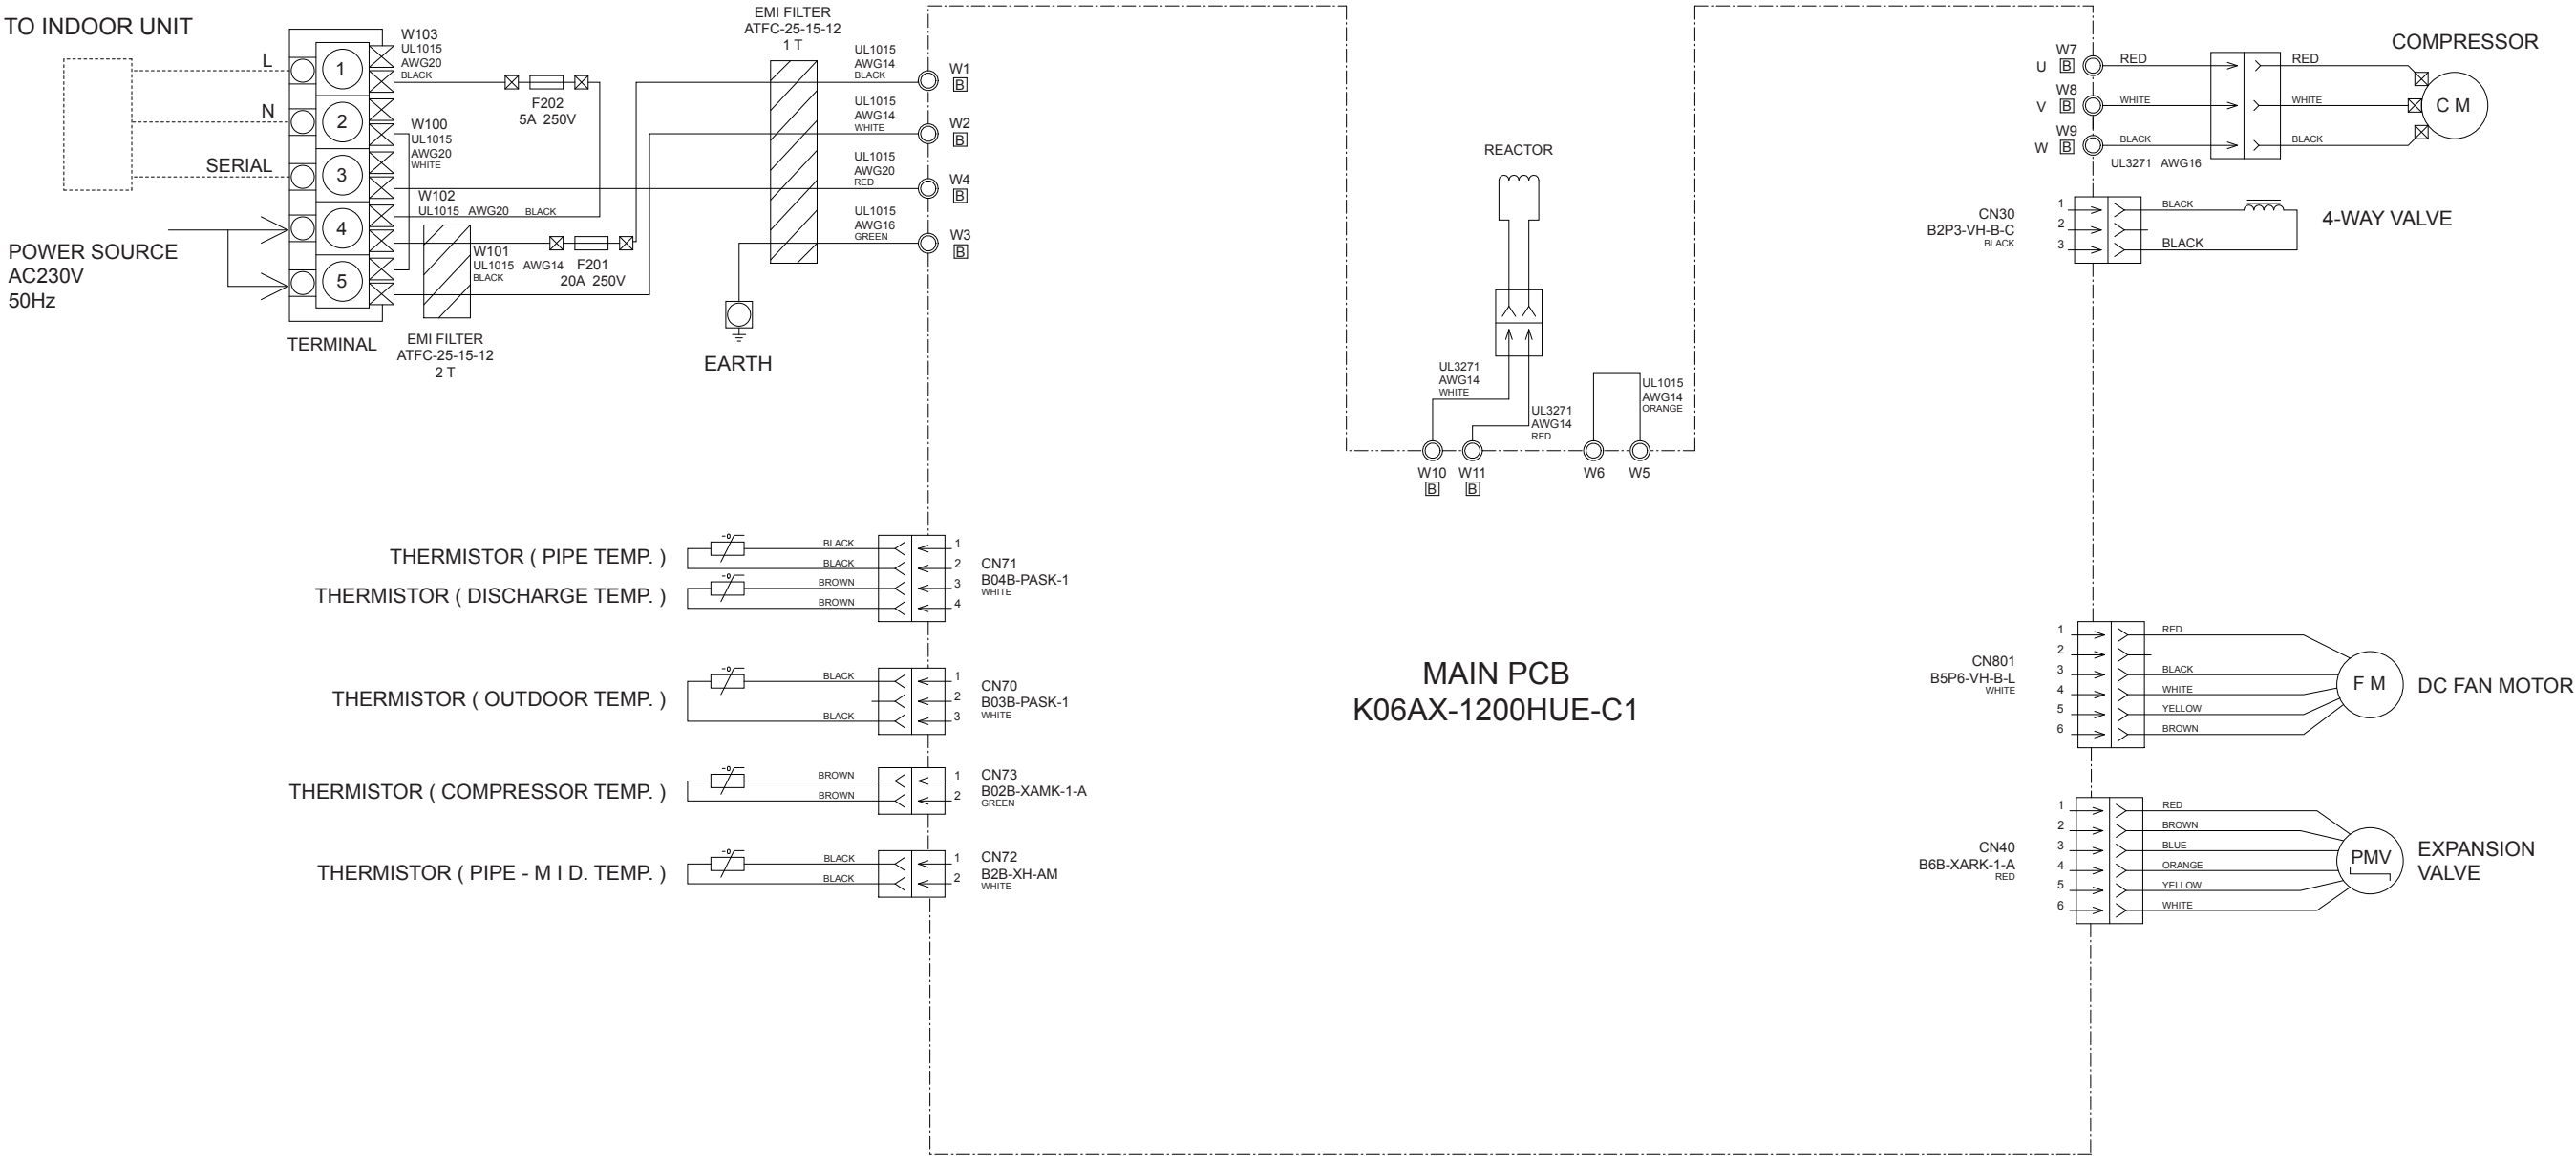

ERROR DETECTION


INDOOR UNIT
and WIRED REMOTE CONTROL

If you use a wireless remote control, the lamp on the photo detector unit will output error codes by way of blinking patterns.

If you use a wired type remote control, error codes will appear on the remote control display. See the lamp blinking patterns and error codes in the table. An error display is displayed only during running.

This is possible only on a wired remote control.

If an error occurs, the following display will be shown. (“Er” will appear in the set room temperature display.)

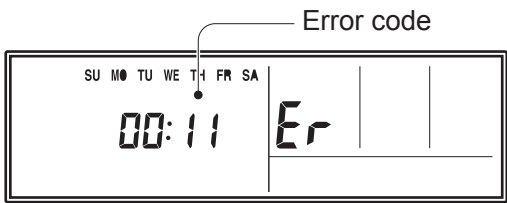

EX. Self-diagnosis



- : 0.5s on / 0.5s off
- ◇ : 0.1s on / 0.1s off
- () : Number of flashing

Indoor unit lamps			Wired remote control	Description
OPERATION (green)	TIMER (orange)	ECONOMY (green)		
● (1)	● (1)	◇	11	Serial communication error
● (1)	● (2)	◇	12	Wired remote control communication error
● (1)	● (5)	◇	15	Check run unfinished
● (2)	● (1)	◇	21	Unit number or Refrigerant circuit address setting error [Simultaneous Multi]
● (2)	● (2)	◇	22	Indoor unit capacity error
● (2)	● (3)	◇	23	Combination error
● (2)	● (4)	◇	24	• Connection unit number error (indoor slave unit) [Simultaneous Multi] • Connection unit number error (indoor unit or branch unit) [Flexible Multi]
● (2)	● (7)	◇	27	Master unit, slave unit set-up error [Simultaneous Multi]
● (3)	● (1)	◇	31	Power supply interruption error
● (3)	● (2)	◇	32	Indoor unit PCB model information error
● (3)	● (5)	◇	35	Manual auto switch error
● (4)	● (1)	◇	41	Inlet air temp. sensor error
● (4)	● (2)	◇	42	Indoor unit Heat Ex. Middle temp. sensor error
● (5)	● (1)	◇	51	Indoor unit fan motor error
● (5)	● (3)	◇	53	Drain pump error
● (5)	● (7)	◇	57	Damper error
● (5)	● (15)	◇	5U	Indoor unit error
● (6)	● (2)	◇	62	Outdoor unit main PCB model information error or communication error
● (6)	● (3)	◇	63	Inverter error
● (6)	● (4)	◇	64	Active filter error, PFC circuit error
● (6)	● (5)	◇	65	Trip terminal L error

Indoor unit lamps			Wired remote control	Description
OPERATION (green)	TIMER (orange)	ECONOMY (green)		
● (6)	● (10)	◇	6A	Display PCB microcomputers communication error
● (7)	● (1)	◇	71	Discharge temp. sensor error
● (7)	● (2)	◇	72	Compressor temp. sensor error
● (7)	● (3)	◇	73	Outdoor unit Heat Ex. liquid temp. sensor error
● (7)	● (4)	◇	74	Outdoor temp. sensor error
● (7)	● (5)	◇	75	Suction Gas temp. sensor error
● (7)	● (6)	◇	76	• 2-way valve temp. sensor error • 3-way valve temp. sensor error
● (7)	● (7)	◇	77	Heat sink temp. sensor error
● (8)	● (2)	◇	82	• Sub-cool Heat Ex. gas inlet temp. sensor error • Sub-cool Heat Ex. gas outlet temp. sensor error
● (8)	● (3)	◇	83	Liquid pipe temp. sensor error
● (8)	● (4)	◇	84	Current sensor error
● (8)	● (6)	◇	86	• Discharge pressure sensor sensor • Suction pressure sensor error • High pressure switch error
● (9)	● (4)	◇	94	Trip detection
● (9)	● (5)	◇	95	Compressor rotor position detection error (permanent stop)
● (9)	● (7)	◇	97	Outdoor unit fan motor error
● (9)	● (9)	◇	99	4-way valve error
● (10)	● (1)	◇	A1	Discharge temp. error
● (10)	● (3)	◇	A3	Compressor temp. error
● (10)	● (4)	◇	A4	High pressure error
● (10)	● (5)	◇	A5	Low pressure error
● (13)	● (2)	◇	J2	Branch boxes error [Flexible Multi]


PARTS

INDOOR UNIT

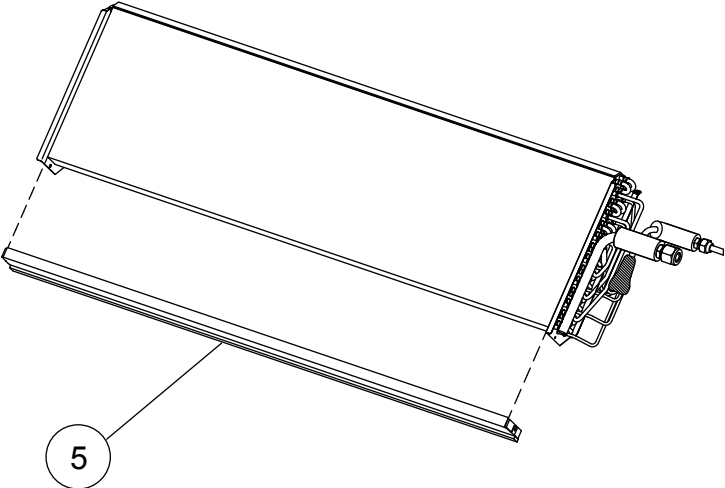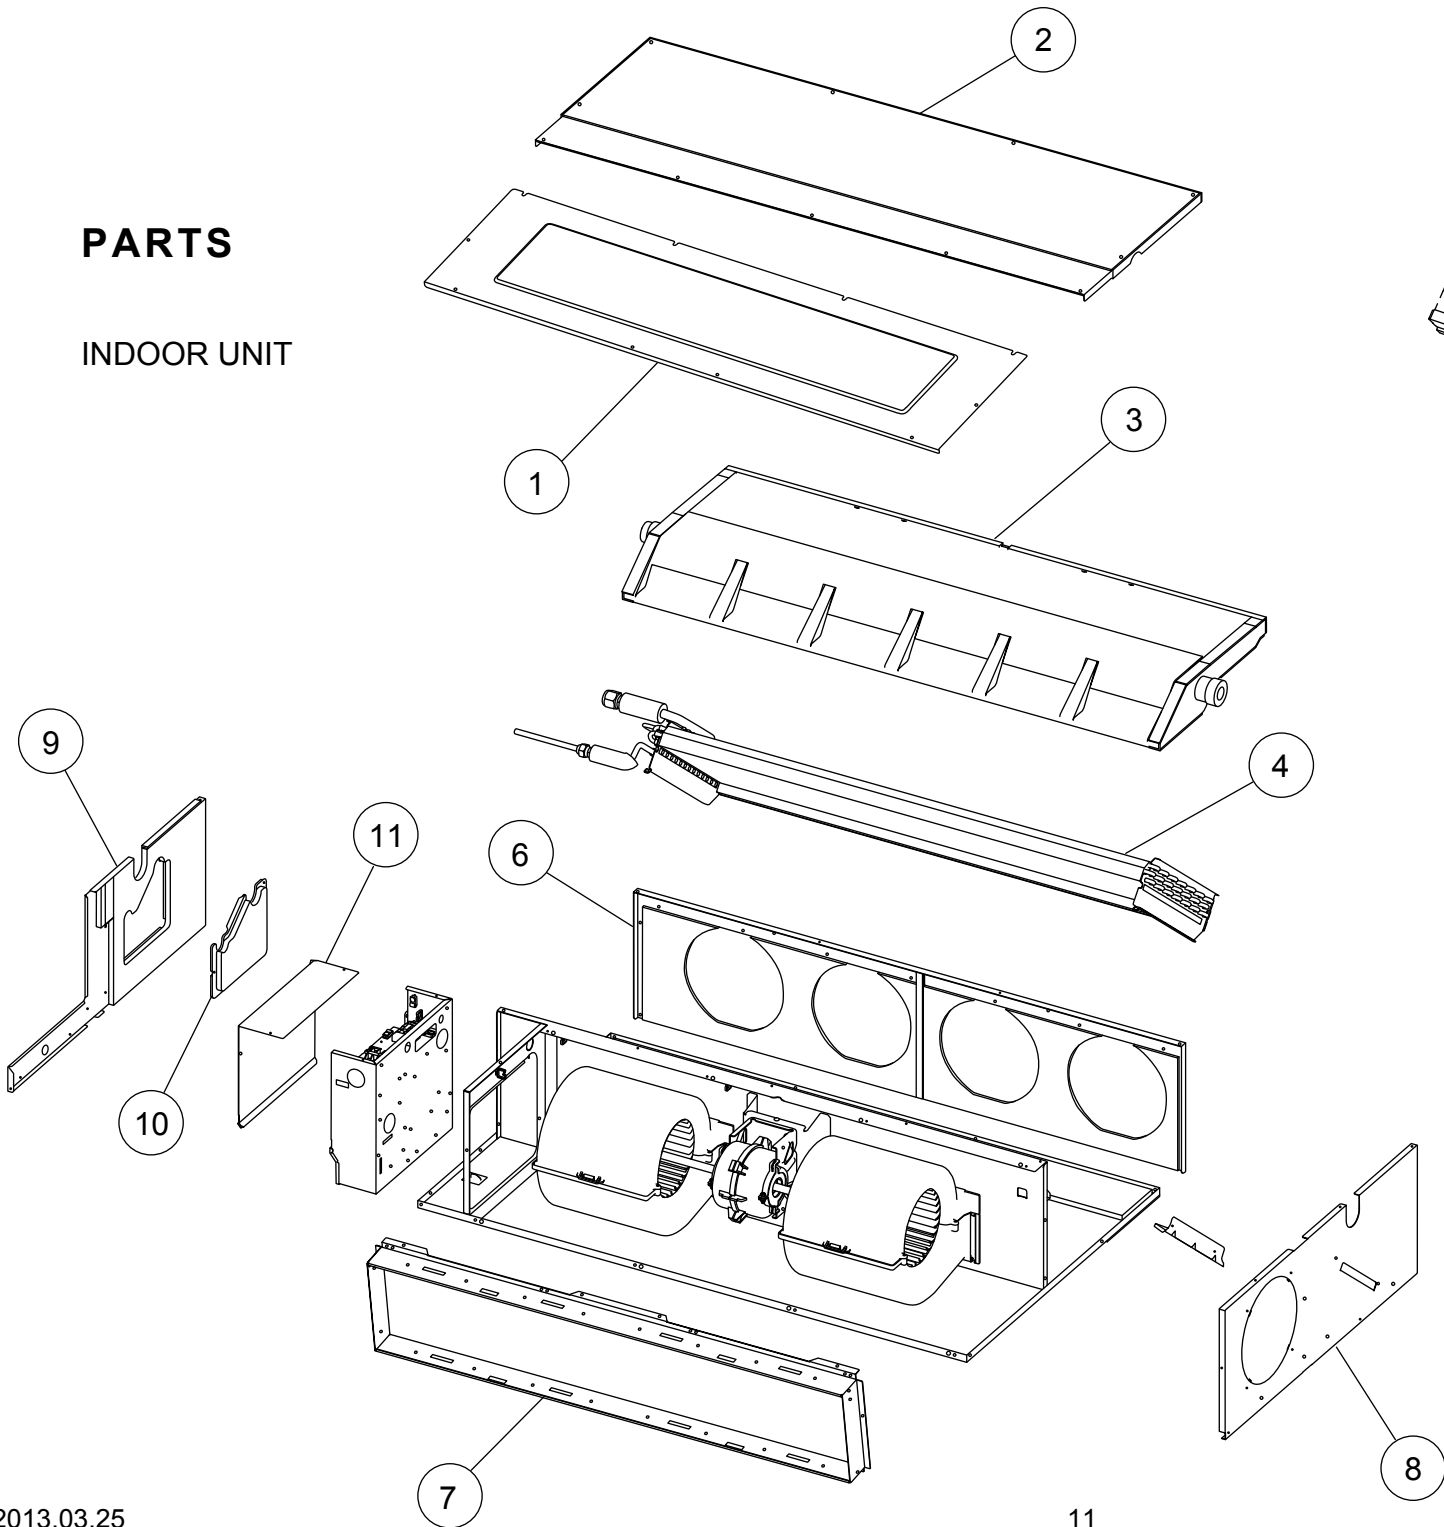


Ref.	Description	Part number	
1	Intake Cover Sub Assy	9374512010	
2	Main Panel Sub Assy	9374511013	
3	Drain Pan Sub Assy	9374513017	
4	Evaporator Total Assy	9374517268	
5	Seal Panel Sub Assy	9374515011	
6	Outlet Panel Sub Assy	9374510016	
7	Intake Frame Assy	9374216017	
8	Cabinet L Sub Assy	9374509010	
9	Cabinet R Sub Assy	9374508013	
10	Bracket Pipe Sub Assy	9374514014	
11	Control Cover A Sub Assy	9374516025	

INDOOR UNIT

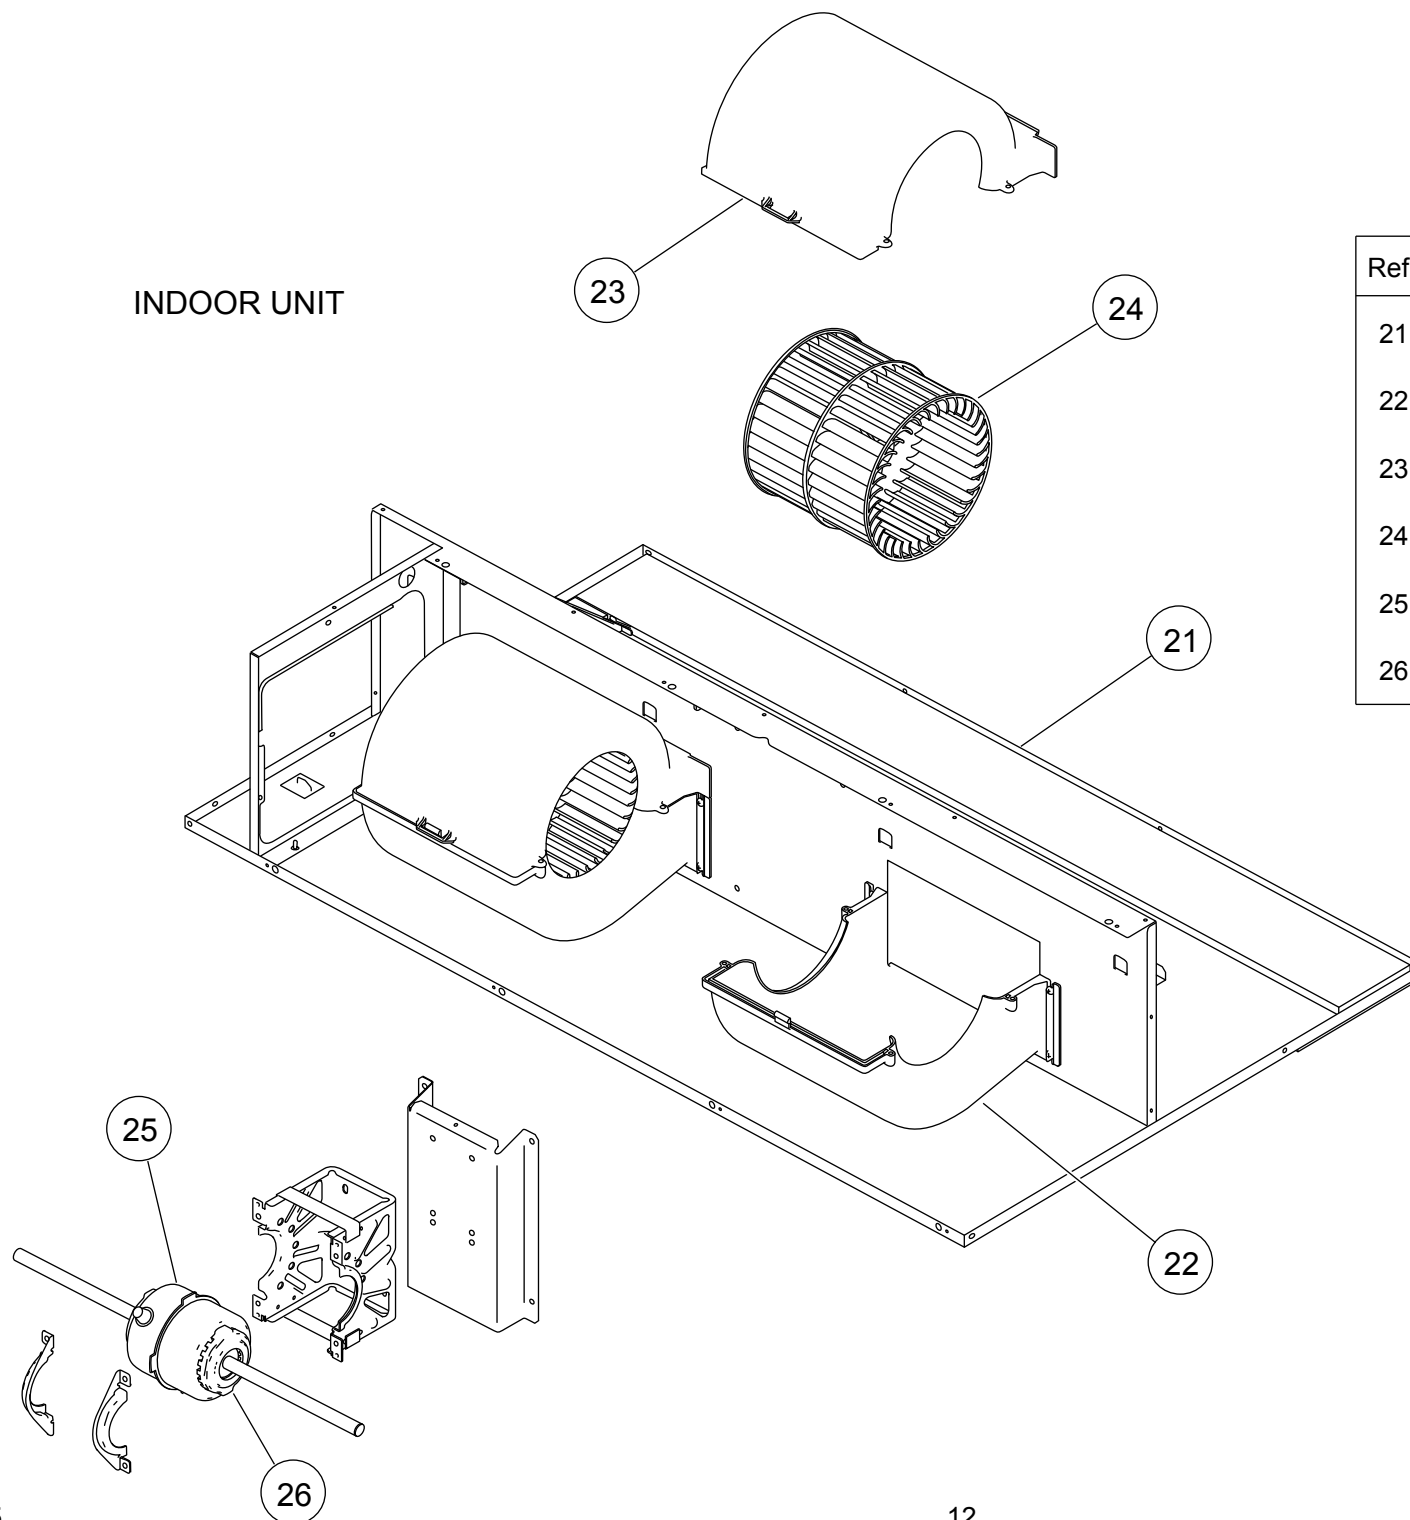


Ref.	Description	Part number	
21	Base Sub Assy	9374504015	
22	Casing A	9374233021	
23	Casing B	9374234028	
24	Sirocco Fan Assy	9356531060	
25	Fan Motor	9602433025	
26	Rubber	9385102002	

INDOOR UNIT

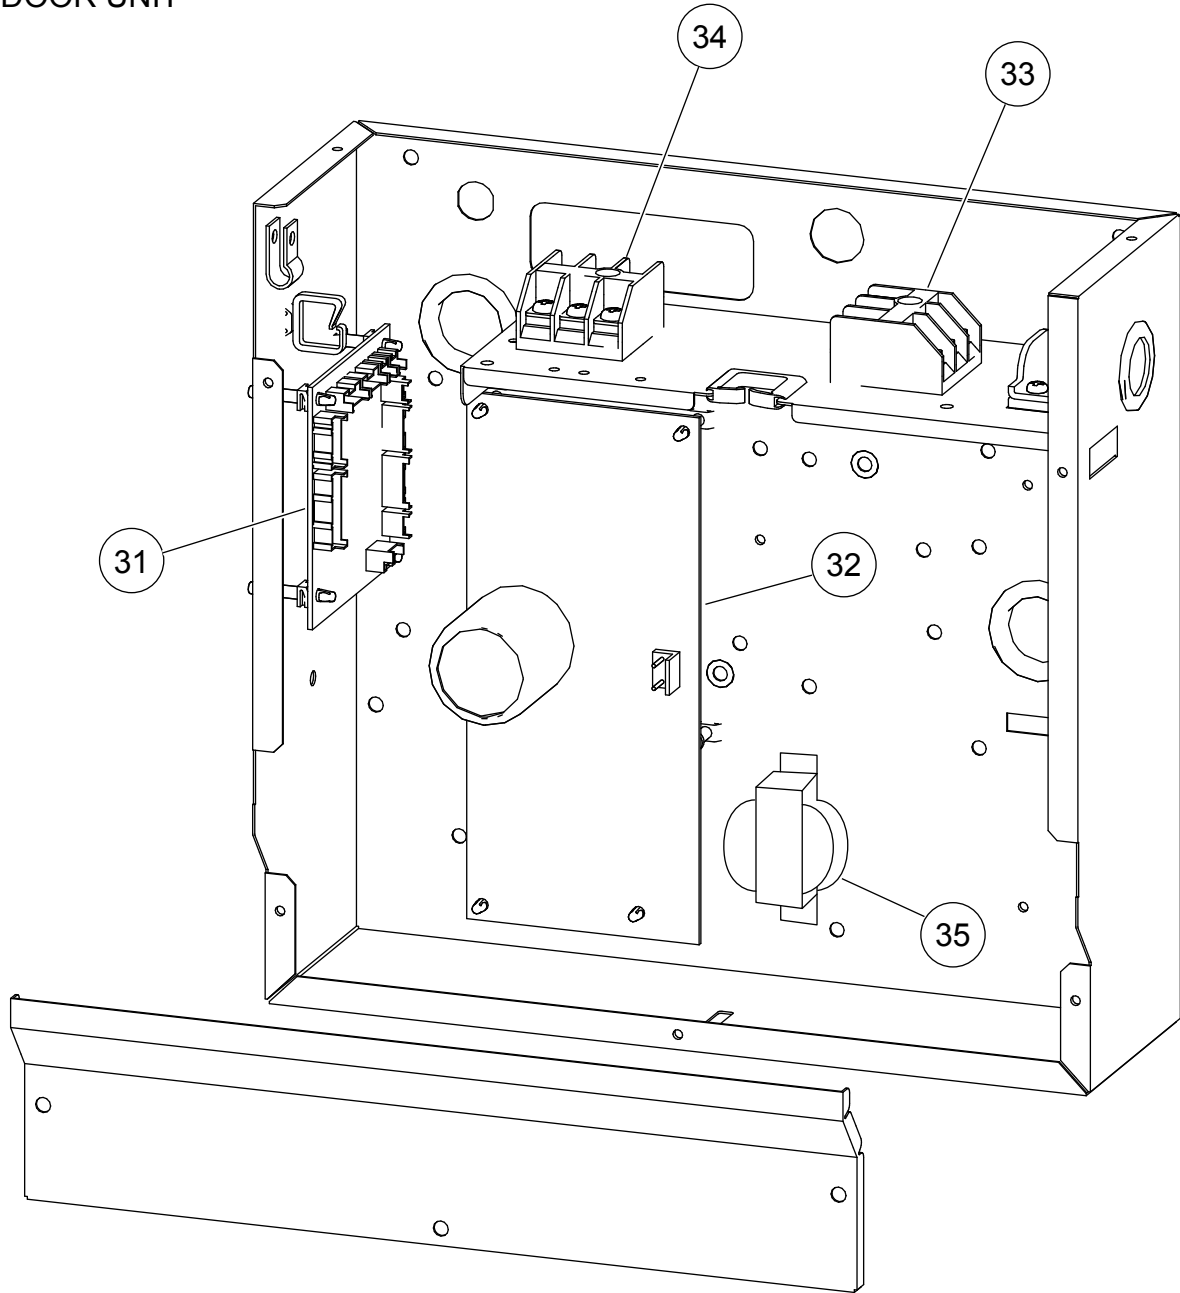


Ref.	Description	Part number	
31	Main PCB	9709245323	
32	Power Supply PCB	9707398373	
33	Terminal 3P	9703345012	
34	Terminal 3P	9306489045	
35	Reactor Assy	9707457018	
36	Remote Control	9318593013	
--	Room Thermistor	9703299025	
--	Pipe Thermistor	9703297021	

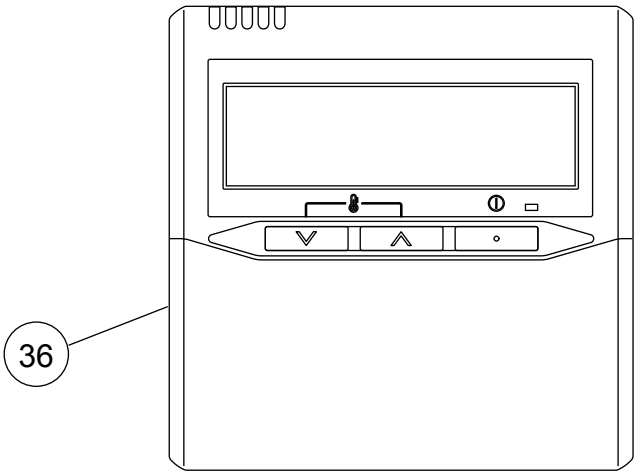


PARTS


OUTDOOR UNIT

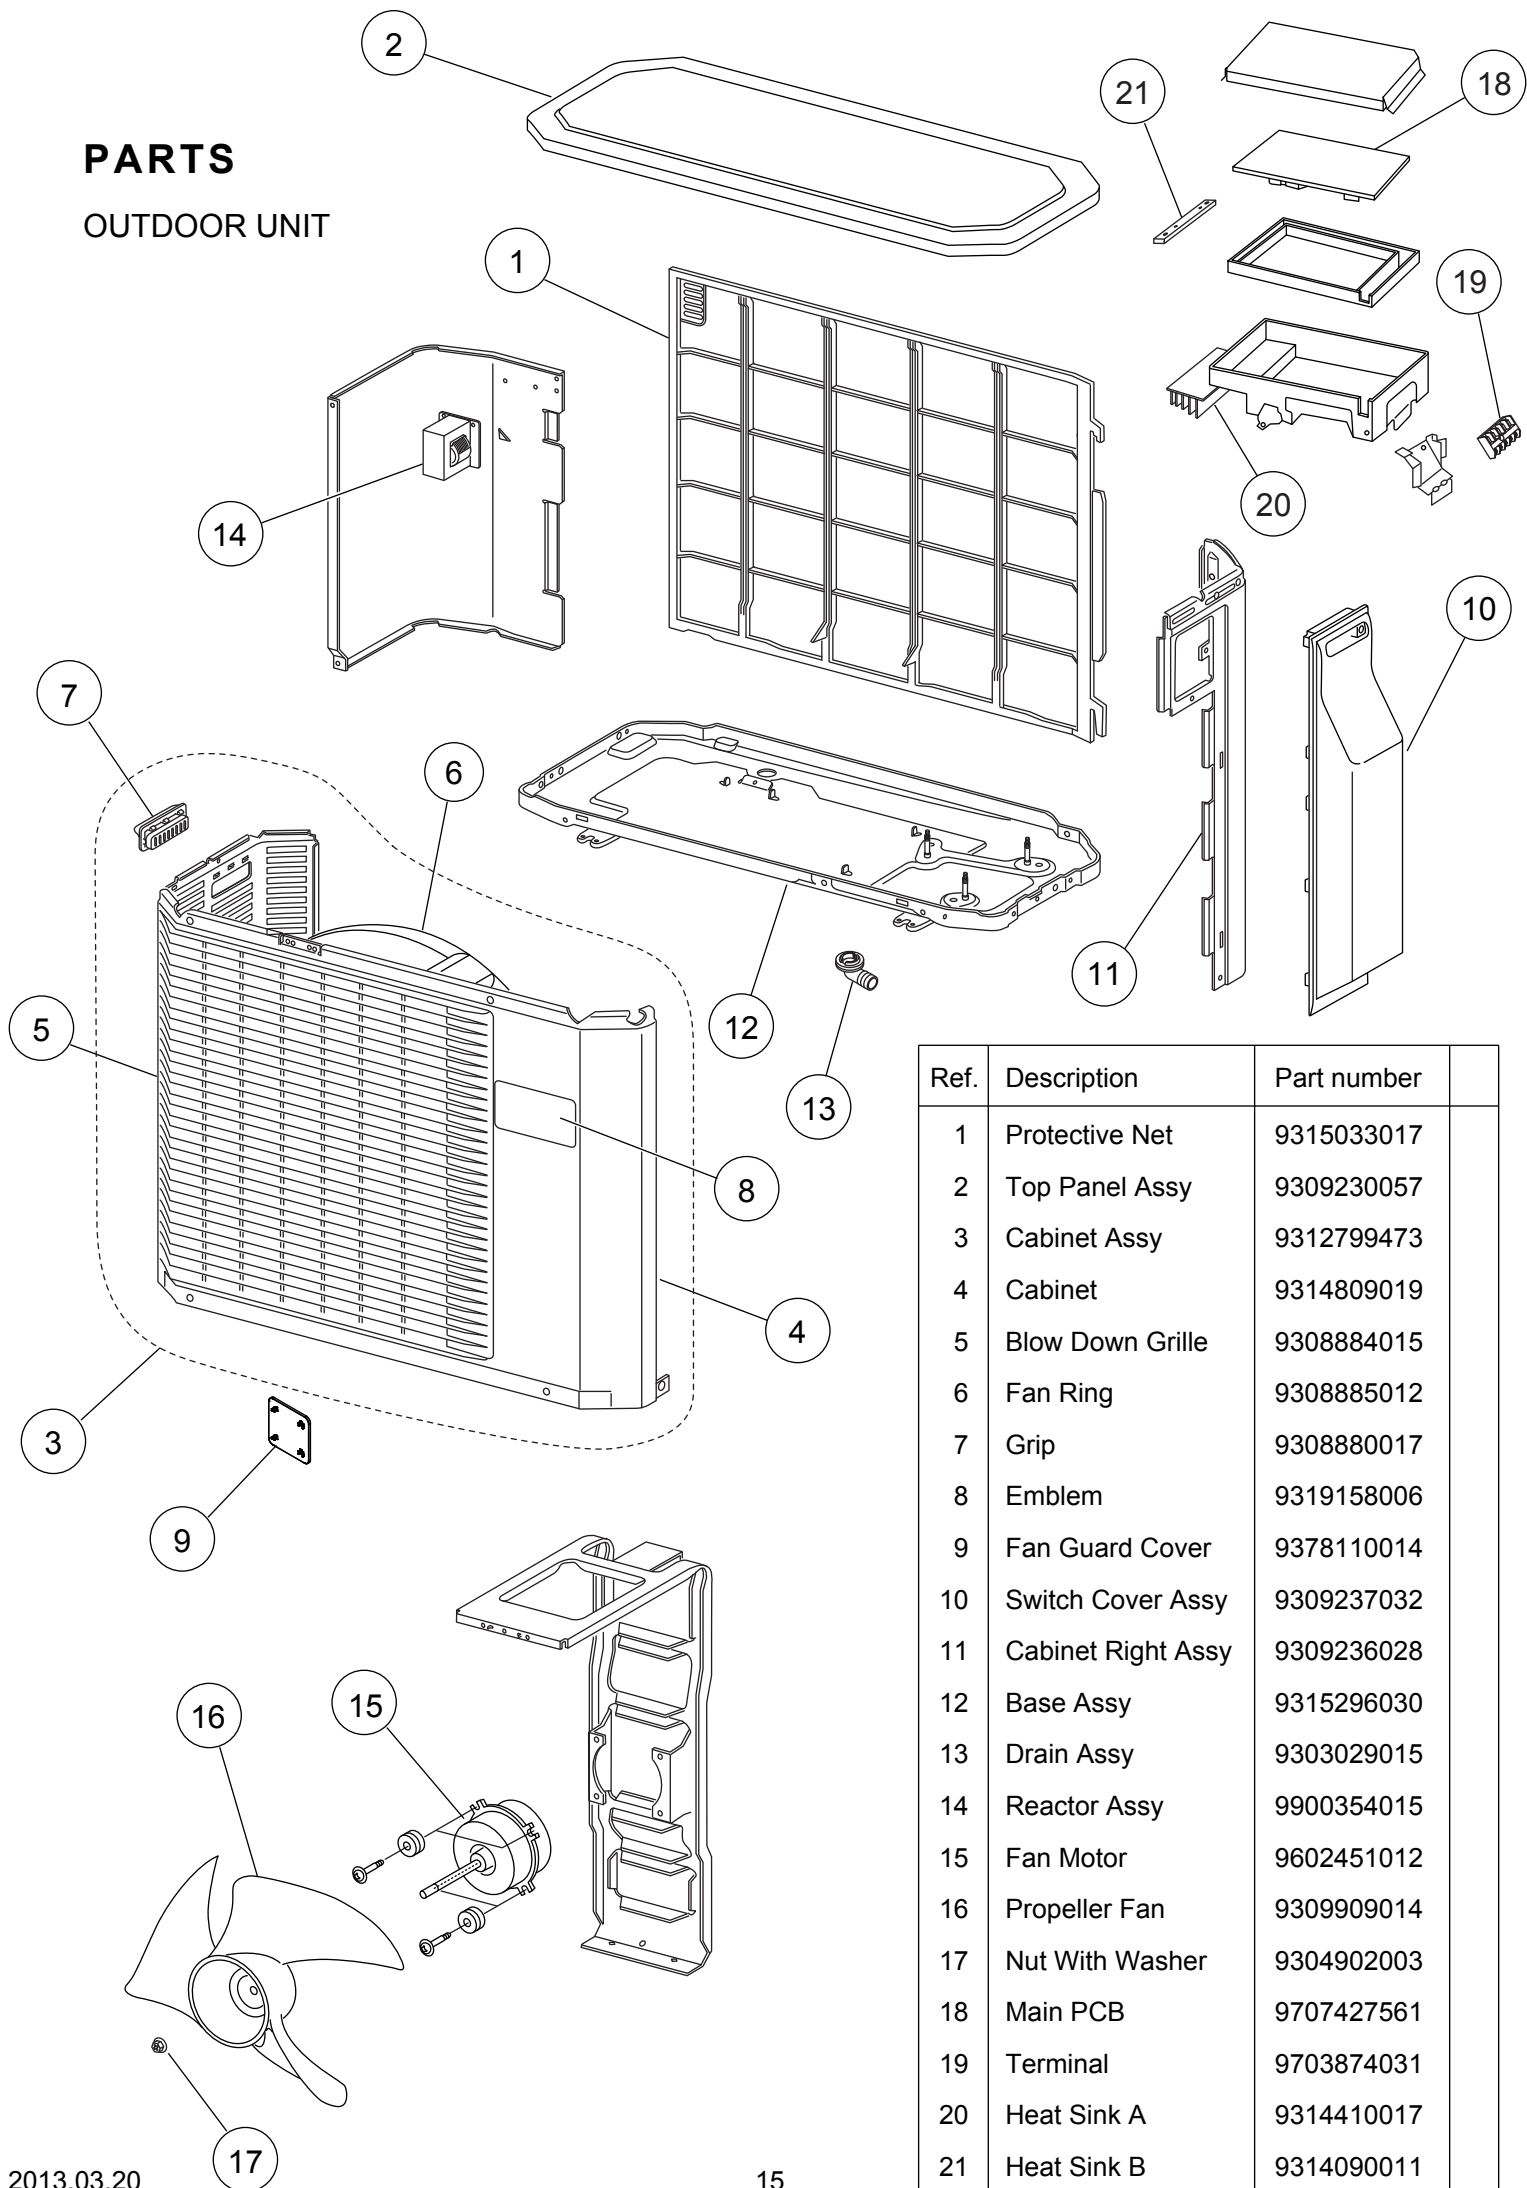

Ref.	Description	Part number	
1	Protective Net	9315033017	
2	Top Panel Assy	9309230057	
3	Cabinet Assy	9312799473	
4	Cabinet	9314809019	
5	Blow Down Grille	9308884015	
6	Fan Ring	9308885012	
7	Grip	9308880017	
8	Emblem	9319158006	
9	Fan Guard Cover	9378110014	
10	Switch Cover Assy	9309237032	
11	Cabinet Right Assy	9309236028	
12	Base Assy	9315296030	
13	Drain Assy	9303029015	
14	Reactor Assy	9900354015	
15	Fan Motor	9602451012	
16	Propeller Fan	9309909014	
17	Nut With Washer	9304902003	
18	Main PCB	9707427561	
19	Terminal	9703874031	
20	Heat Sink A	9314410017	
21	Heat Sink B	9314090011	

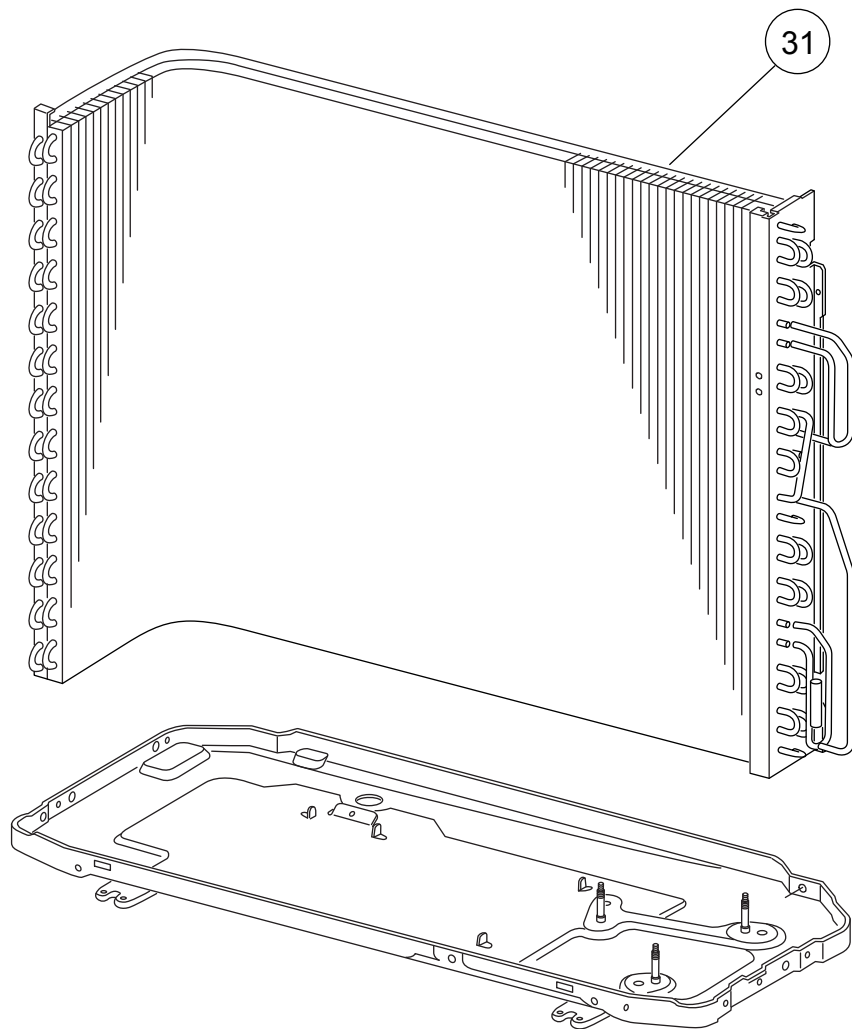




OUTDOOR UNIT


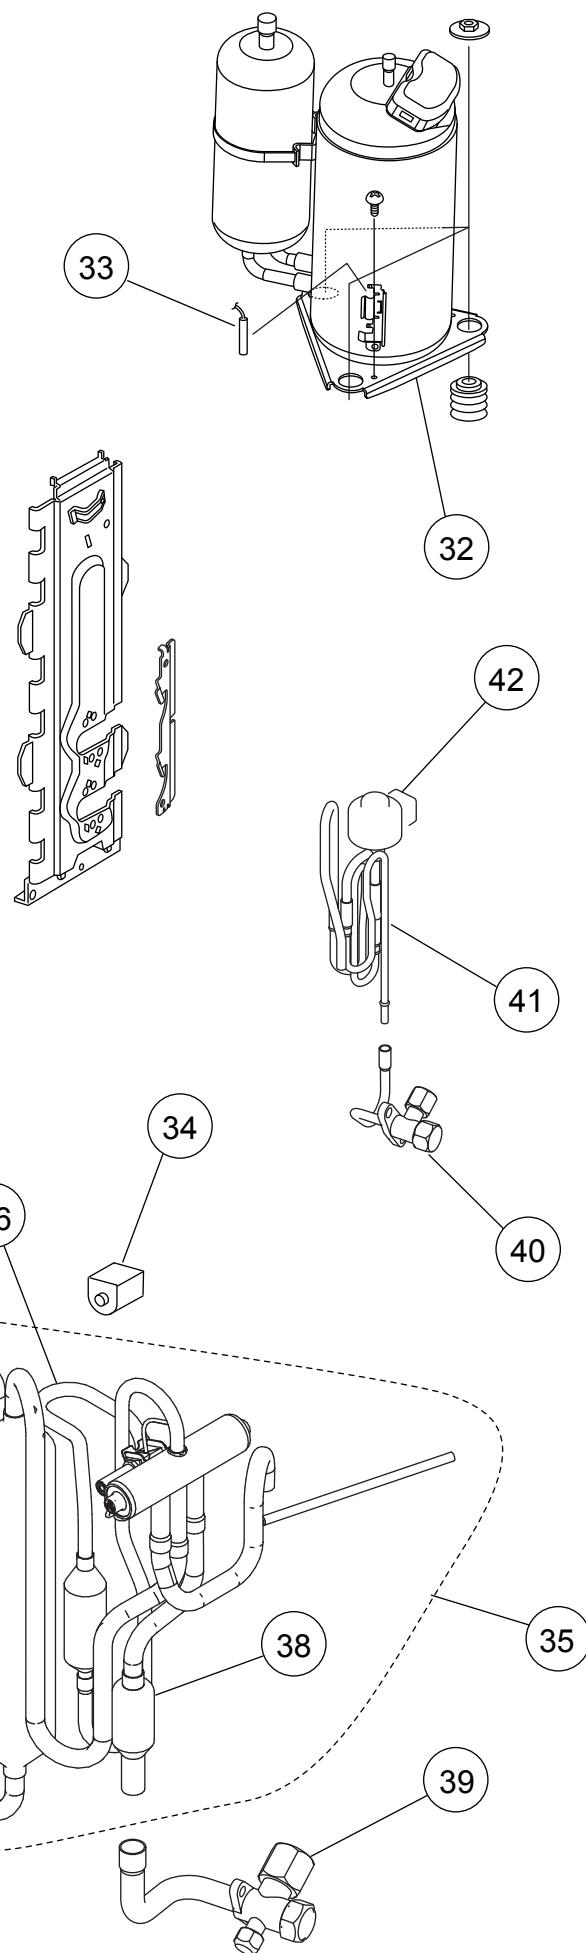


Ref.	Description	Part number	
31	Condenser Total Assy	9312322091	
32	Compressor Assy	9315297037	
33	Compressor Thermistor	9900156046	
34	Solenoid Coil	9970055010	
35	4-way Valve Assy	9315311023	
36	Discharge Pipe Assy	9315312020	
37	Suction Pipe Assy	9315313027	
38	3WV Joint Pipe Assy	9315308023	
39	3-way Valve Assy	9315414014	
40	2-way Valve Assy	9313062019	
41	Pulse Motor Valve Assy	9315310019	
42	Expansion Valve Coil	9900057039	
--	Thermistor Assy	9900148027	
--	Heat Exchanger Thermistor	9900403010	
--	Outdoor Thermistor	9900210045	


ACCESSORIES

INDOOR UNIT

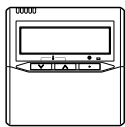Name and Shape	Q'ty	Application (part number)
Hanger 	4	For suspending the indoor unit from ceiling (9356563009)
Drain hose insulation 	1	Insulates the drain hose and vinyl hose (313806217708)
Cable tie (large) 	1	For fixing the drain hose (312300787605)
Cable tie (small) 	1	For remote control and remote control cable binding (313361275805)
Cable tie 	2	For electrical wiring
Wire clamber 	1	For electrical wiring
Remote control 	1	(9318593013)




Name and Shape	Q'ty	Application (part number)
Remote control cord 	1	For connecting a remote control (9372714010)
Screw (M4 x 16) 	2	For installing a remote control (0700181108)
Coupler heat insulation (large) 	1	For indoor side pipe joint (large pipe) (9378173569)
Coupler heat insulation (small) 	1	For indoor side pipe joint (small pipe) (9378173521)
Special nut A (large flange) 	4	For suspending the indoor unit from ceiling (313005446653)
Special nut B (small flange) 	4	(313005446759)





OUTDOOR UNIT

Name and Shape	Q'ty	Application
Drain pipe 	1	For outdoor unit drain piping work. (9303029015)

OPTIONAL PARTS

When connecting the square duct and round duct,
use the optional square flange or round flange and flexible duct.

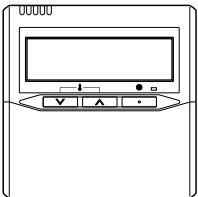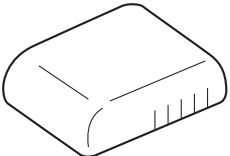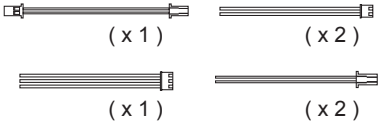Name and Shape	Application (part number)
Wired remote control UTY-RNNYM 	
Simple remote control UTY-RSNYM 	
Remote sensor unit UTY-XSZX 	Room temperature sensor (9002763005)
External connect kit UTD-ECS5A 	For control input/output port (9077359004)

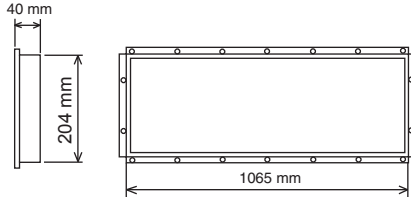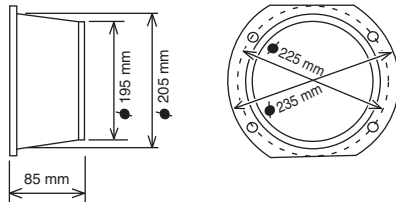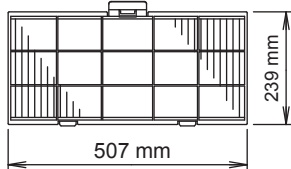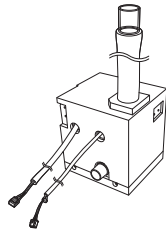Name and Shape	Application (part number)
Square flange, UTD-SF045T 	(9098180007)
Round flange, UTD-RF204 	(9093160004)
Long-life filter UTD-LF25NA 	(9079892004)
Drain pump unit UTZ-PX1NBA 	(9052978008)

1302G4189