

SPLIT TYPE AIR CONDITIONER (50Hz) DUCT type

Models	Indoor unit	Outdoor unit
	RD-60CC	ROD-60CB
	RD-60HC	ROD-60HB
	RD-60EC	RO-60EB
	RD-60TC	RO-60TB



preliminary

CONTENTS

SPECIFICATIONS	1
OUTLINE AND DIMENSIONS	3
REFRIGERANT SYSTEM DIAGRAM	5
CIRCUIT DIAGRAM	6
PCB CIRCUIT DIAGRAM	7
DIP SWITCH SETTING	9
ERROR CONTENTS	10
DISASSEMBLY ILLUSTRATION	11
PARTS LIST	20
STANDARD ACCESSORIES	23

SPECIFICATIONS

TYPE	Cooling	Colling & Heating
INDOOR UNIT	RD-60CC	RD-60HC
OUTDOOR UNIT	ROD-60CB	ROD-60HB
COOLING CAPACITY (kW)	16.4 - 17.0	16.4 - 17.0
HEATING CAPACITY (kW)	-----	17.8 - 18.2

ELECTRICAL SPECIFICATIONS

POWER SUPPLY (V)	380 - 415	
FREQUENCY (Hz)	50	
RUNNING CURRENT (A)	COOLING	9.8 - 9.8
	HEATING	-----
INPUT (kW)	COOLING	5.80 - 5.90
	HEATING	-----
EER (kW/kW)	COOLING	2.83 - 2.88
	HEATING	-----
MOISTURE REMOVAL (ℓ/hr)	6.5	
AIR CIRCULATION - Hi (m³/hr)	3,600	

COMPRESSOR

TYPE	Hermetic type, 2 poles, 3-phase, Induction motor, Scroll	
DISCRIMINATION	ZR72KC-TFD	
REFRIGERANT R-22 (g)	3,800	4,800

FAN MOTOR

POWER SUPPLY (V)	220	
INDOOR UNIT	DISCRIMINATION	MFA-60NTFS
	HI-SPEED (r.p.m.)	1,300
	MED-SPEED (r.p.m.)	1,135
	LO-SPEED (r.p.m.)	960
OUTDOOR UNIT	DISCRIMINATION	MFB-362FT
	HI-SPEED (r.p.m.)	800

DIMENSIONS

INDOOR UNIT H x W x D (mm)	400 x 1,050 x 500
OUTDOOR UNIT	1,355 x 940 x 370

WEIGHTS

INDOOR UNIT NET / GROSS (kg)	50 / 55	
OUTDOOR UNIT	121 / 136	129 / 144

REFRIGERANT CHARGE (R-22)

PIPE LENGTH	7.5 m	3,800 g	4,800 g
	10.0m	3,900 g	4,800 g
	20.0 m	4,300 g	4,800 g
	30.0 m	4,700 g	5,400 g
	40.0 m	5,100 g	6,000 g
	50.0 m	5,500 g	6,600 g
Additional Charge		40 g / m	60 g / m
Chargeless		7.5 m	20 m
MAX PIPE LENGTH		50 m	50 m
MAX ELEVATION		30 m	30 m

SPECIFICATIONS

TYPE	Cooling	Colling & Heating
INDOOR UNIT	RD-60EC	RD-60TC
OUTDOOR UNIT	RO-60EB	RO-60TB
COOLING CAPACITY (kW)	17.0	17.0
HEATING CAPACITY (kW)	-----	19.7

ELECTRICAL SPECIFICATIONS

POWER SUPPLY (V)		400	
FREQUENCY (Hz)		50	
RUNNING CURRENT (A)	COOLING	10.1	10.1
	HEATING	-----	9.6
INPUT (kW)	COOLING	6.20	6.20
	HEATING	-----	5.90
EER (kW/kW)	COOLING	2.74	2.74
	HEATING	-----	3.34
MOISTURE REMOVAL (ℓ/hr)		6.5	
AIR CIRCULATION - Hi (m³/hr)		3,540	

COMPRESSOR

TYPE		Hermetic type, 2 pole, 3-phase, Induction motor, Scroll	
DISCRIMINATION		ZR-72KCE-TFD	
REFRIGERANT	R-407C (g)	4,200	4,800

FAN MOTOR

POWER SUPPLY (V)		400	
INDOOR UNIT	DISCRIMINATION	MFA-60NTFS	
	HI-SPEED (r.p.m.)	1290	
	MED-SPEED (r.p.m.)	1110	
	LO-SPEED (r.p.m.)	920	
OUTDOOR UNIT	DISCRIMINATION	MFB-362FT	
	HI-SPEED (r.p.m.)	820	800

DIMENSIONS

INDOOR UNIT	H x W x D (mm)	400 x 1,050 x 500	
OUTDOOR UNIT		1,355 x 940 x 370	

WEIGHTS

INDOOR UNIT	NET / GROSS (kg)	50 / 55	
OUTDOOR UNIT		116 / 131	129 / 144

REFRIGERANT CHARGE (R407C)


PIPE LENGTH	20 m	4,200 g	4,800 g
	30 m	4,500 g	5,400 g
	40 m	4,800 g	6,000 g
	50 m	5,100 g	6,600 g
Additional Charge		30 g / m	60 g / m
Chargeless		20 m	20 m
MAX PIPE LENGTH		50 m	50 m
MAX ELEVATION		30 m	30 m

OUTLINE AND DIMENSIONS

(Unit : mm)


INDOOR UNIT

Models : RD-60CC
RD-60HC
RD-60EC
RD-60TC

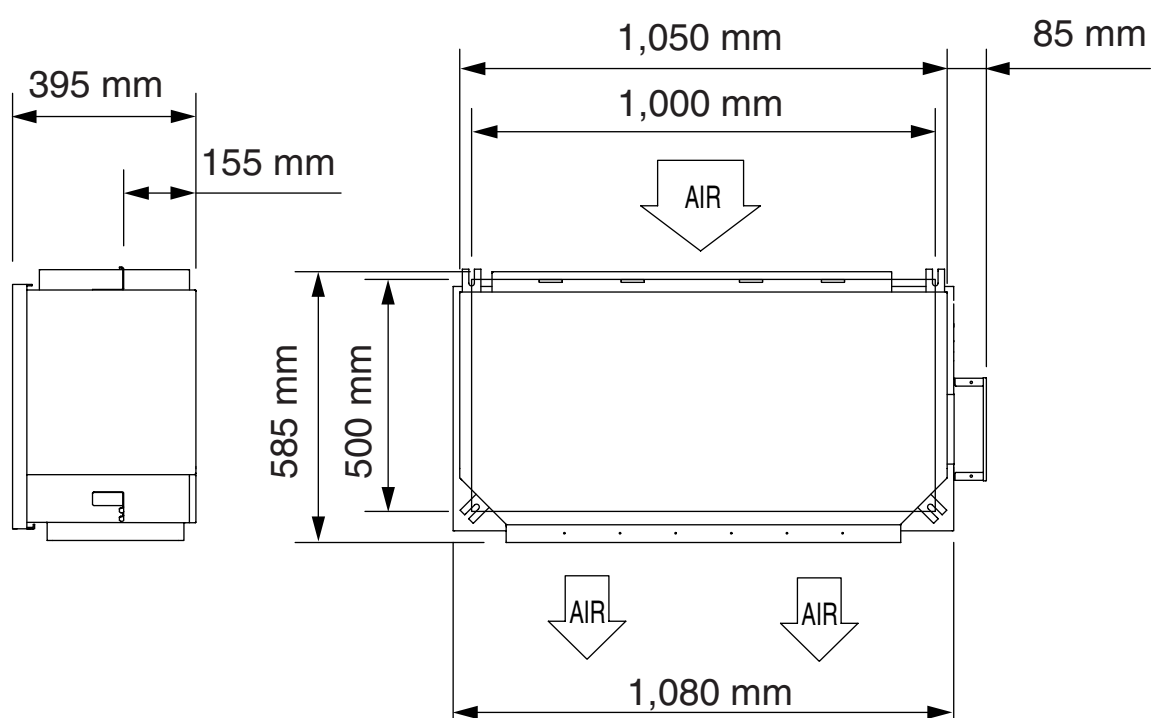

OUTDOOR UNIT (Unit : mm)


Models : ROD-60CB
ROD-60HB
RO-60EB
RO-60TB

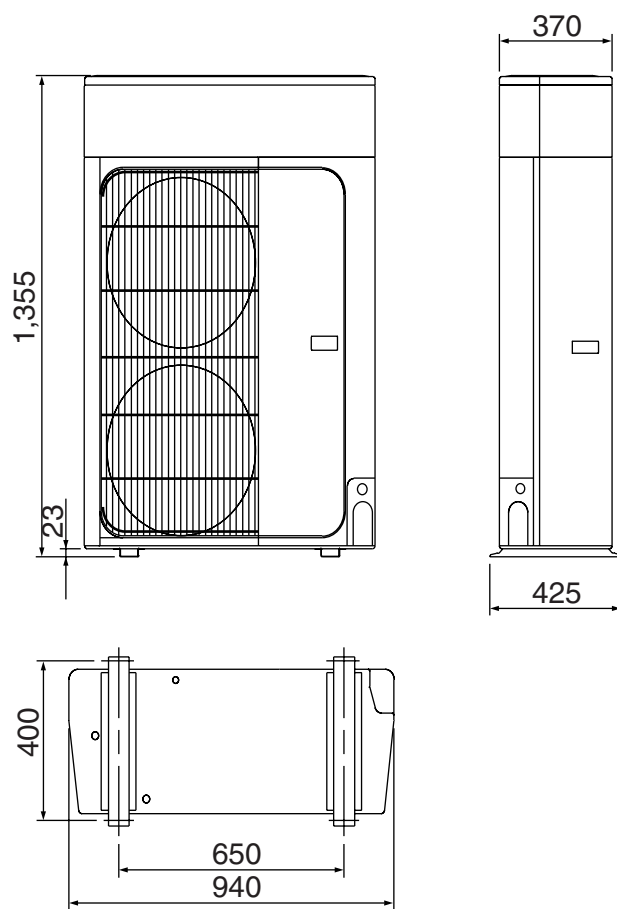

REFRIGERANT SYSTEM DIAGRAM


Model : RD-60CC / ROD-60CB
RD-60EC / RO-60EB

Model : RD-60HC / ROD-60HB
RD-60TC / RO-60TB

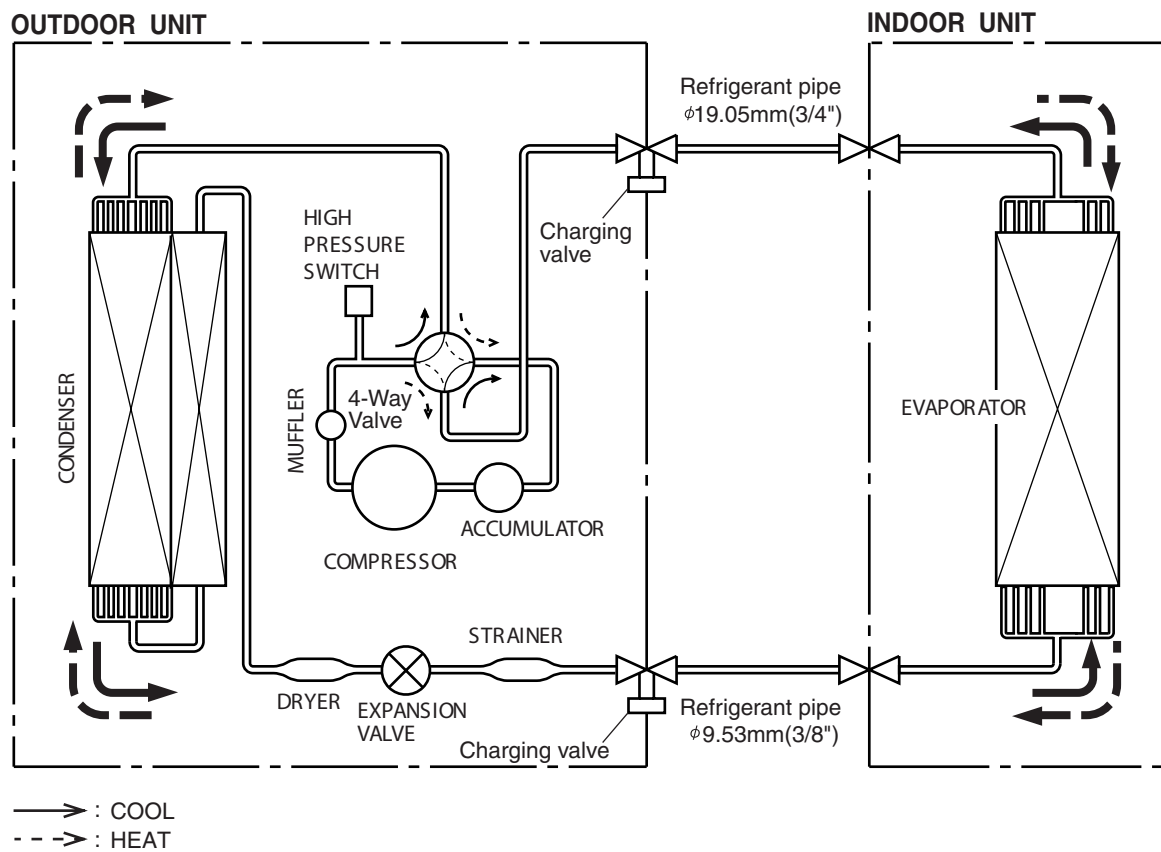


CIRCUIT DIAGRAM

Models : RD-60CC
RD-60EC

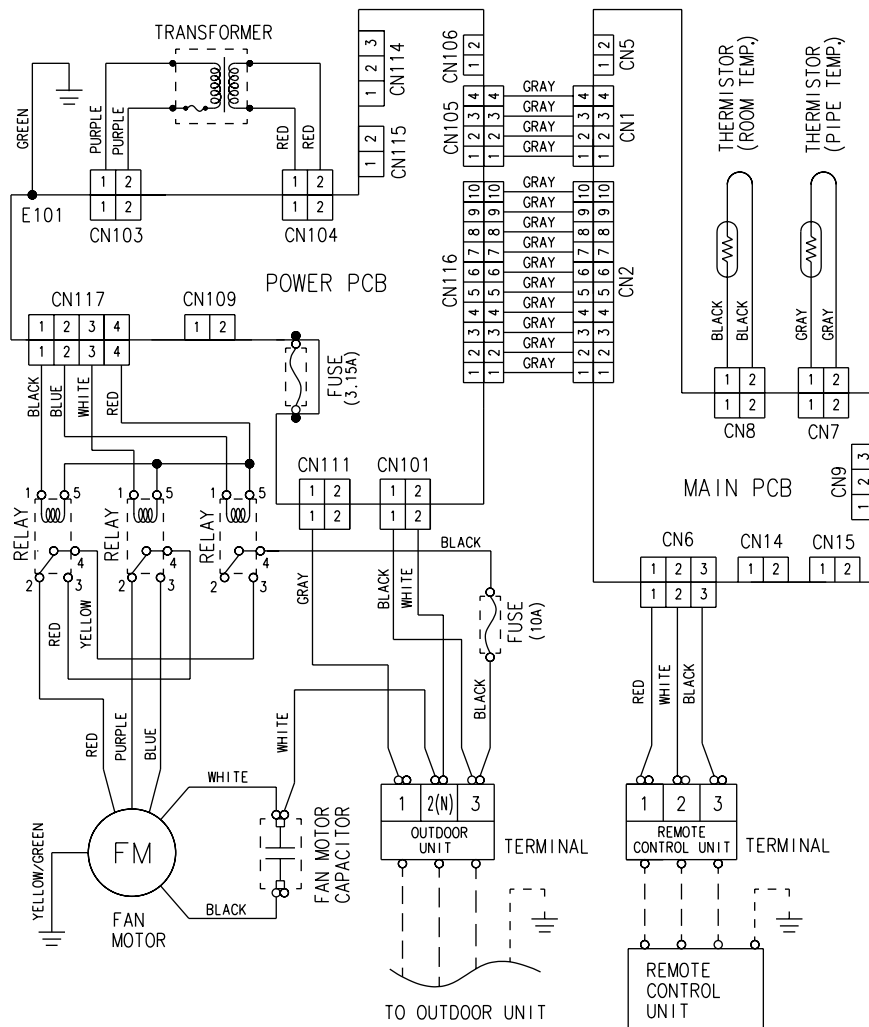


Models : ROD-60CB


WIRING DIAGRAM

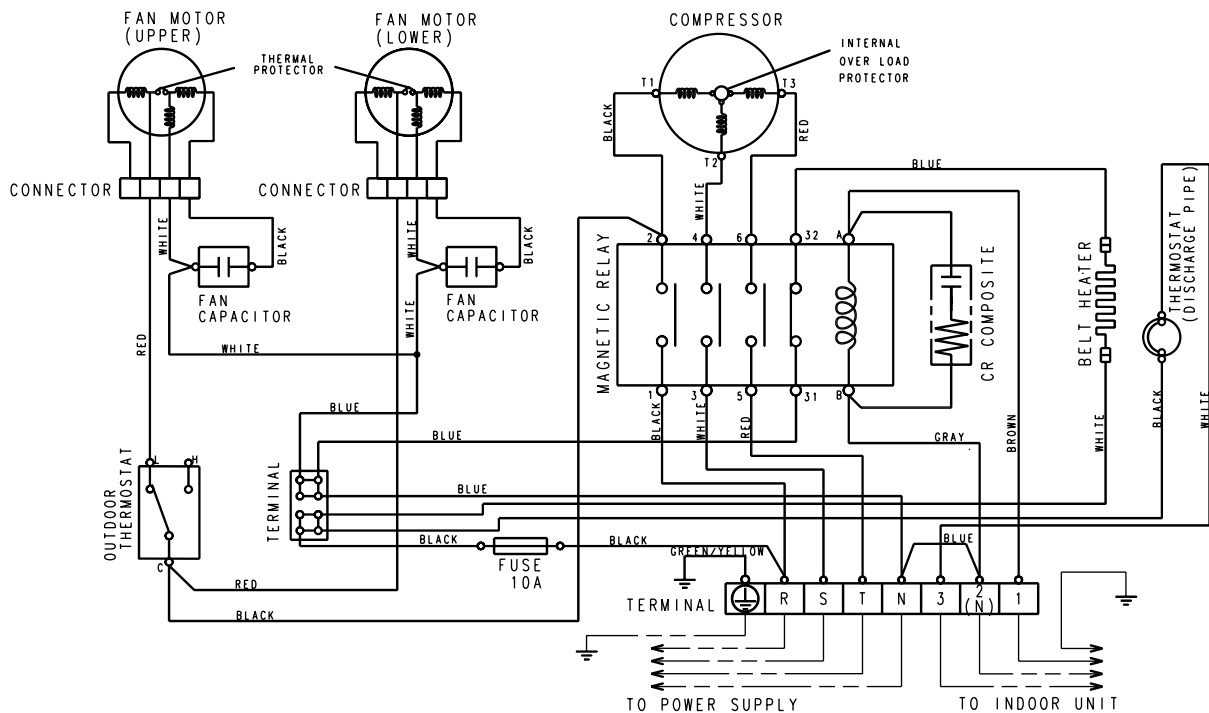

Models : RO-60EB

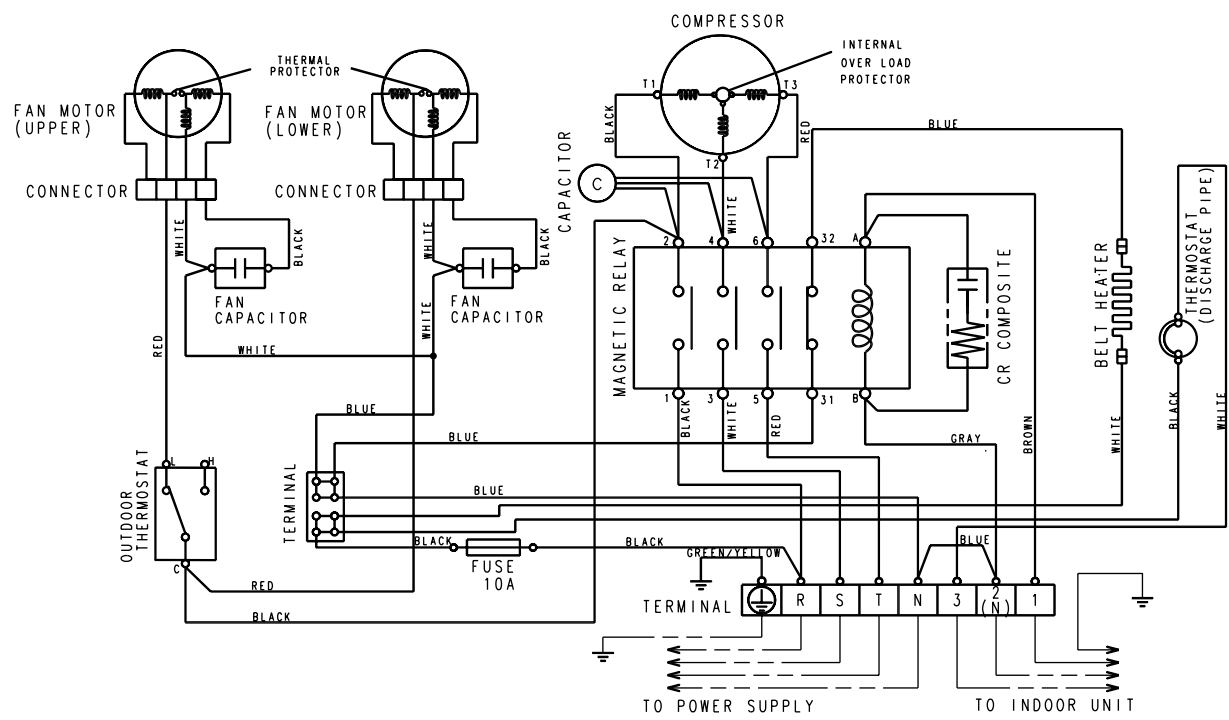


Model : RO-60TB

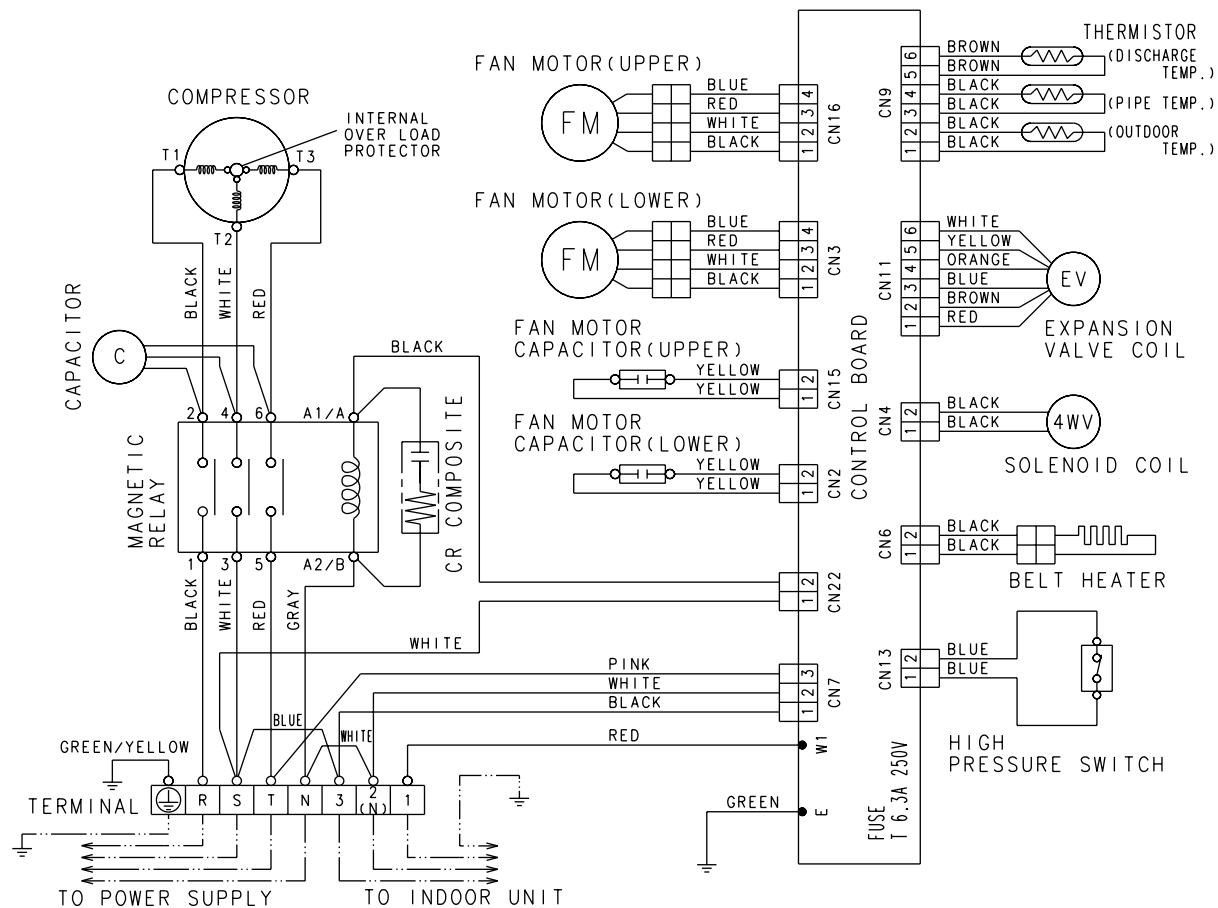

INDOOR PRINTED CIRCUIT BOARD CIRCUIT DIAGRAM

Models : RD-60CC
RD-60EC

CONTROLLER PCB ASSEMBLY (MAIN PCB) EZ-00304WSE-C

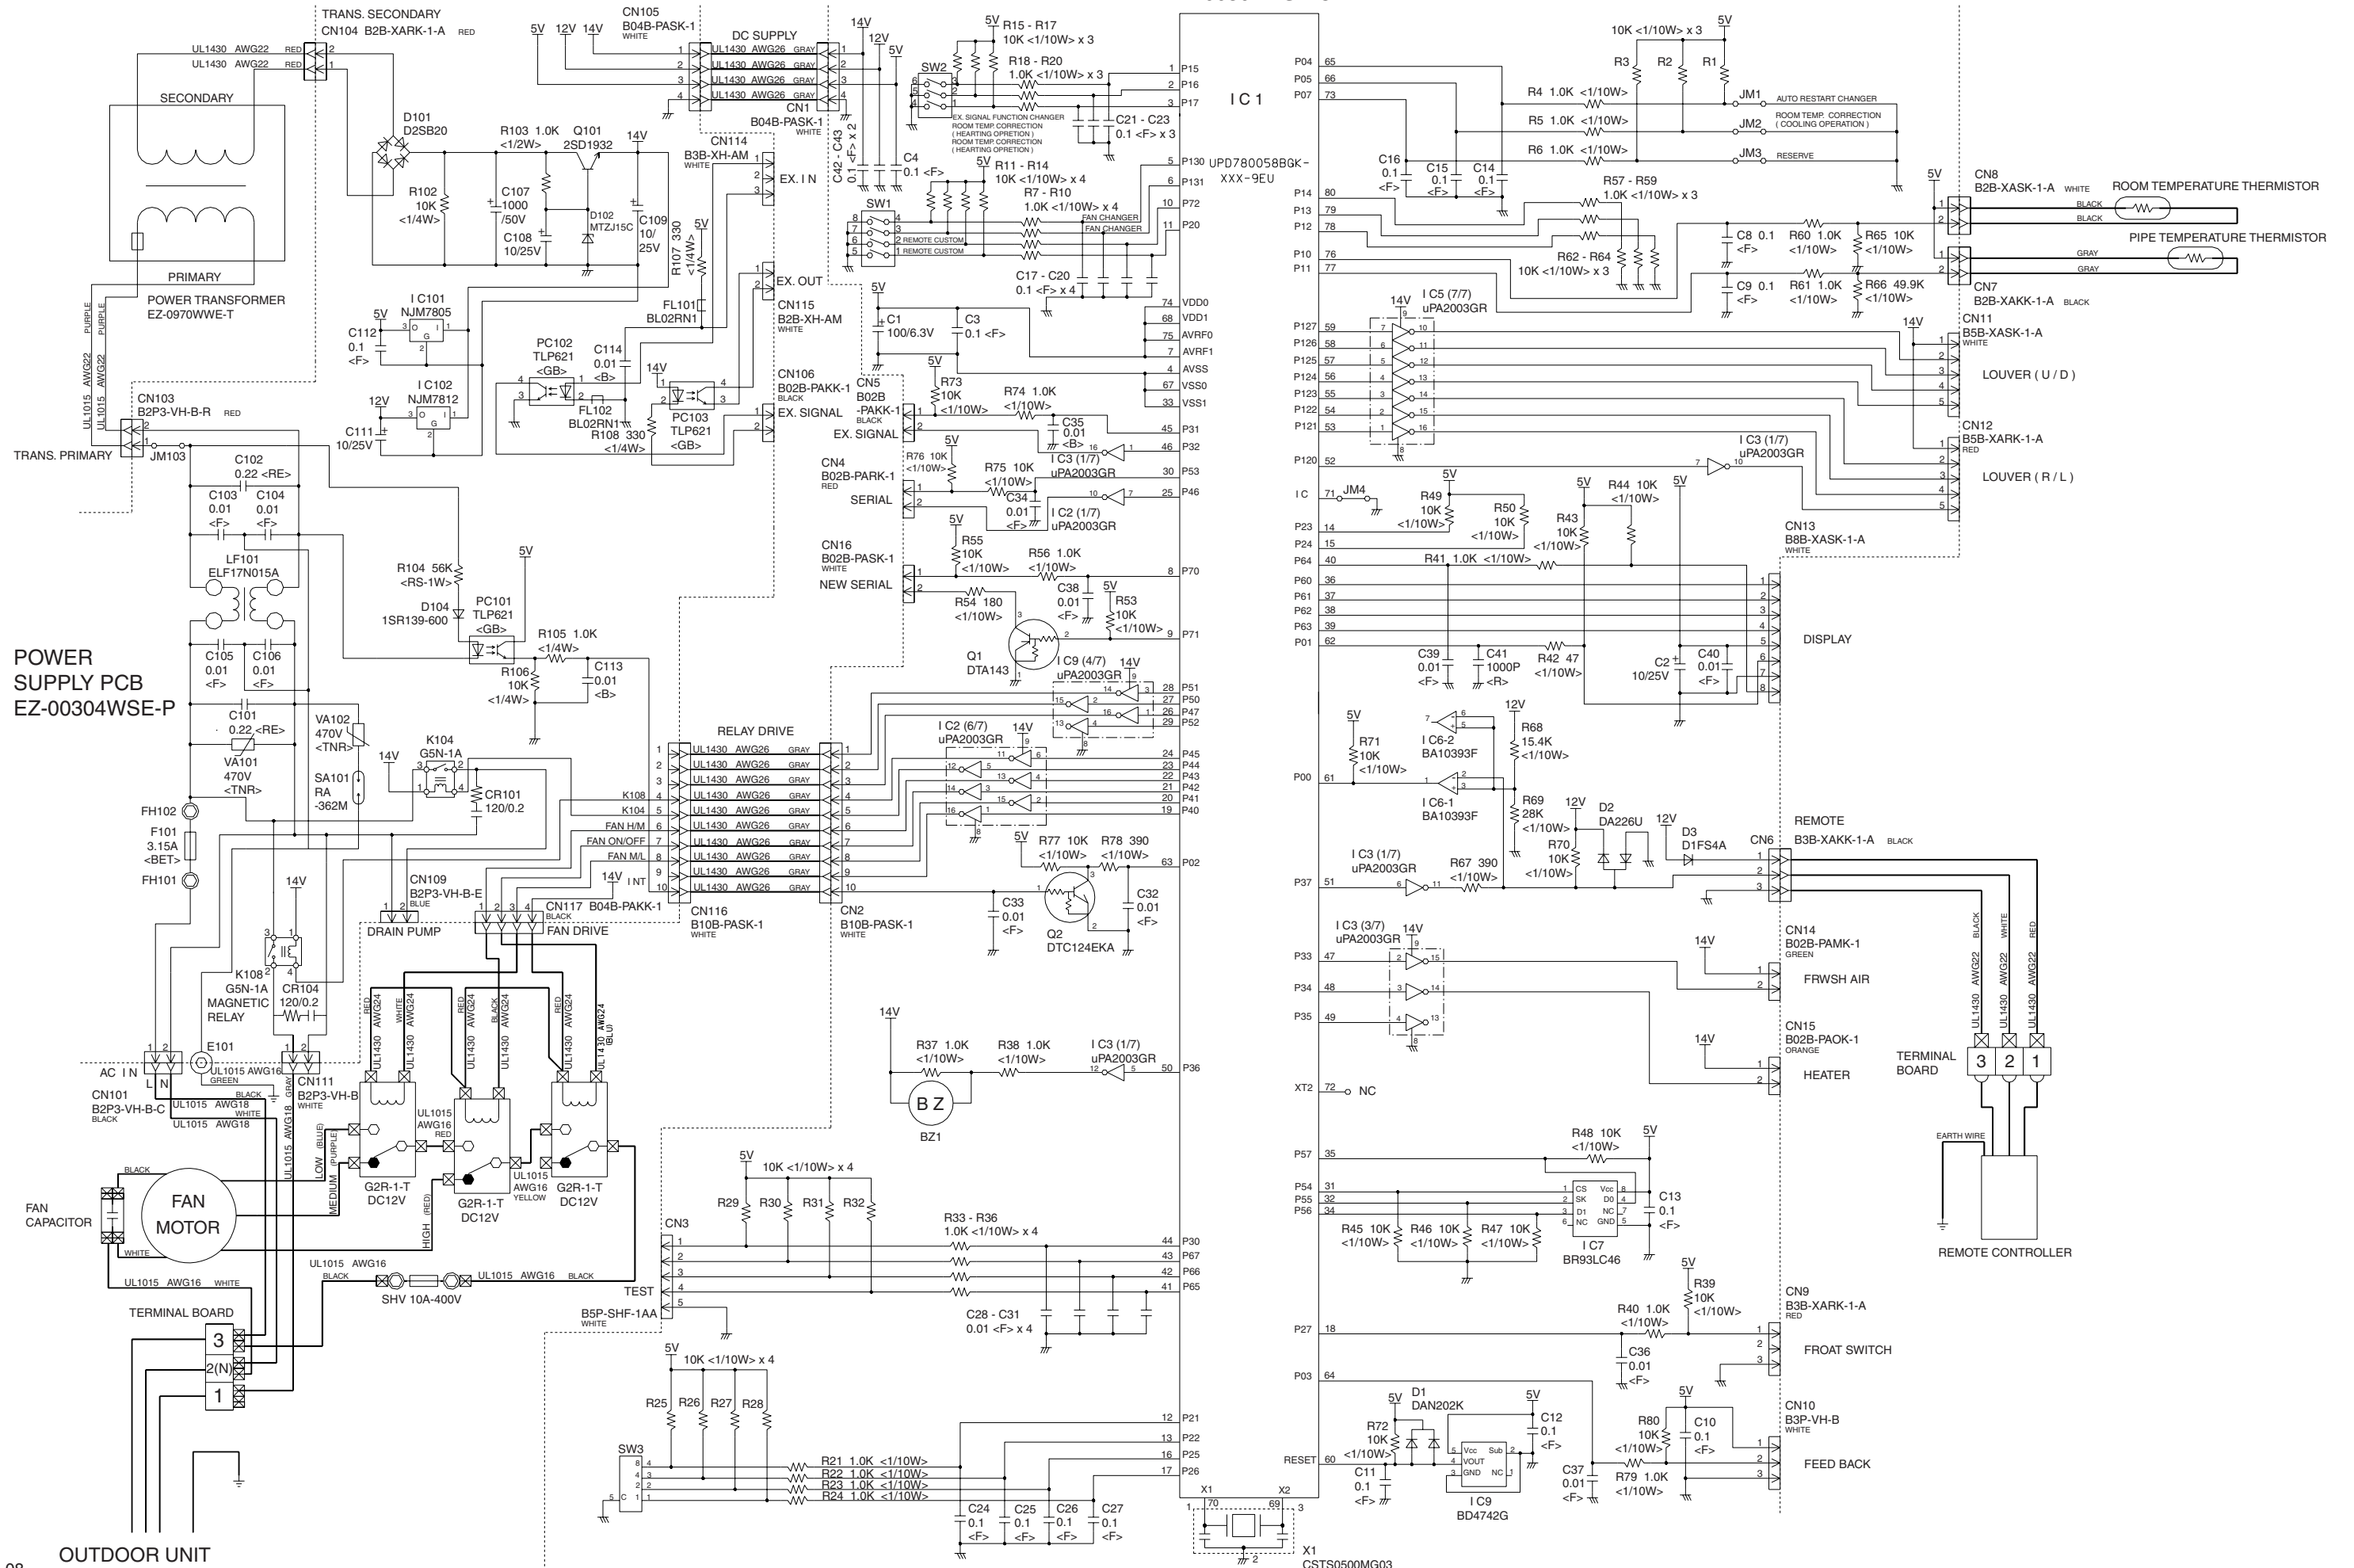


Models : RD-60HC
RD-60TC

POWER SUPPLY PCB
EZ-003SHSE-P

2004.03.08 OUTDOOR UNIT

CONTROLLER PCB ASSEMBLY (MAIN PCB)
EZ-003SHSE-C

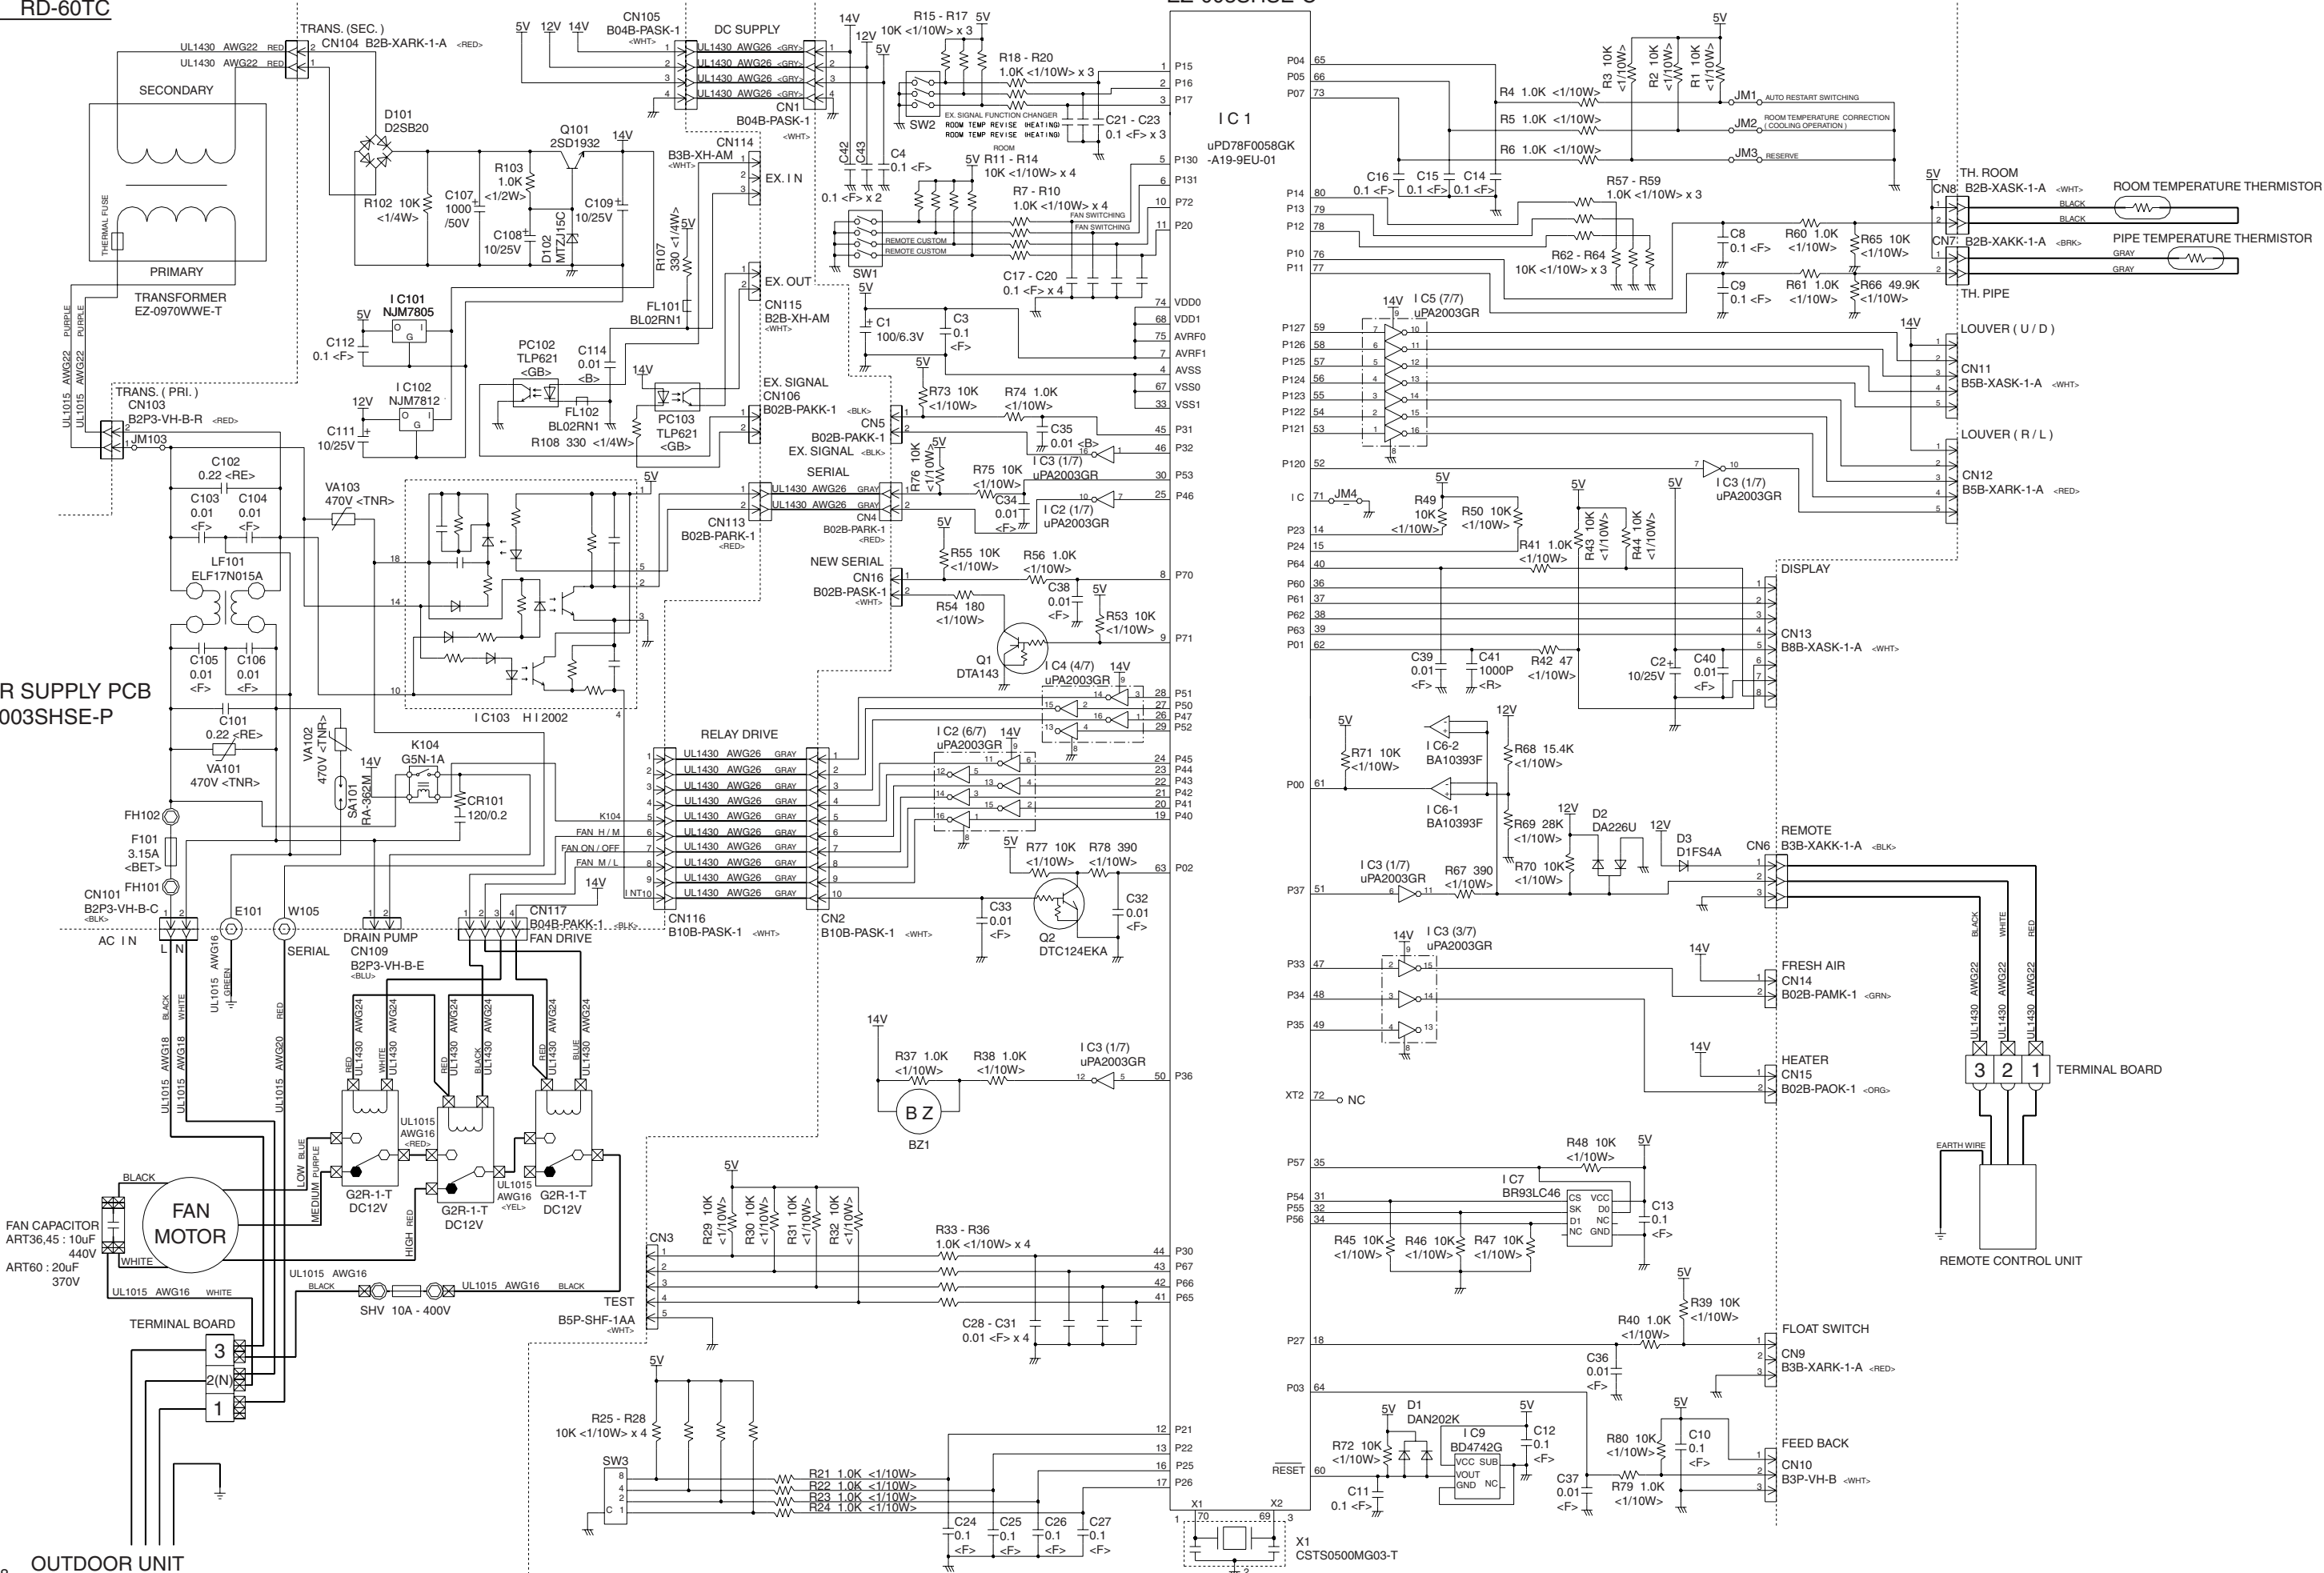


Models : ROD-60HB
RO-60TB

Diagram illustrating the wiring for the CN11 B6B-XASK-1-A WHITE component. The component is connected to a 24V supply. The wiring includes the following connections:

- CN11-1: UL1430 AWG24 RED
- CN11-2: UL1430 AWG24 BROWN
- CN11-3: UL1430 AWG24 BLUE
- CN11-4: UL1430 AWG24 ORANGE

The component is connected to an EEV-A (Electric Expansion Valve-A) with a capacity of $Q < 1/10W >$.

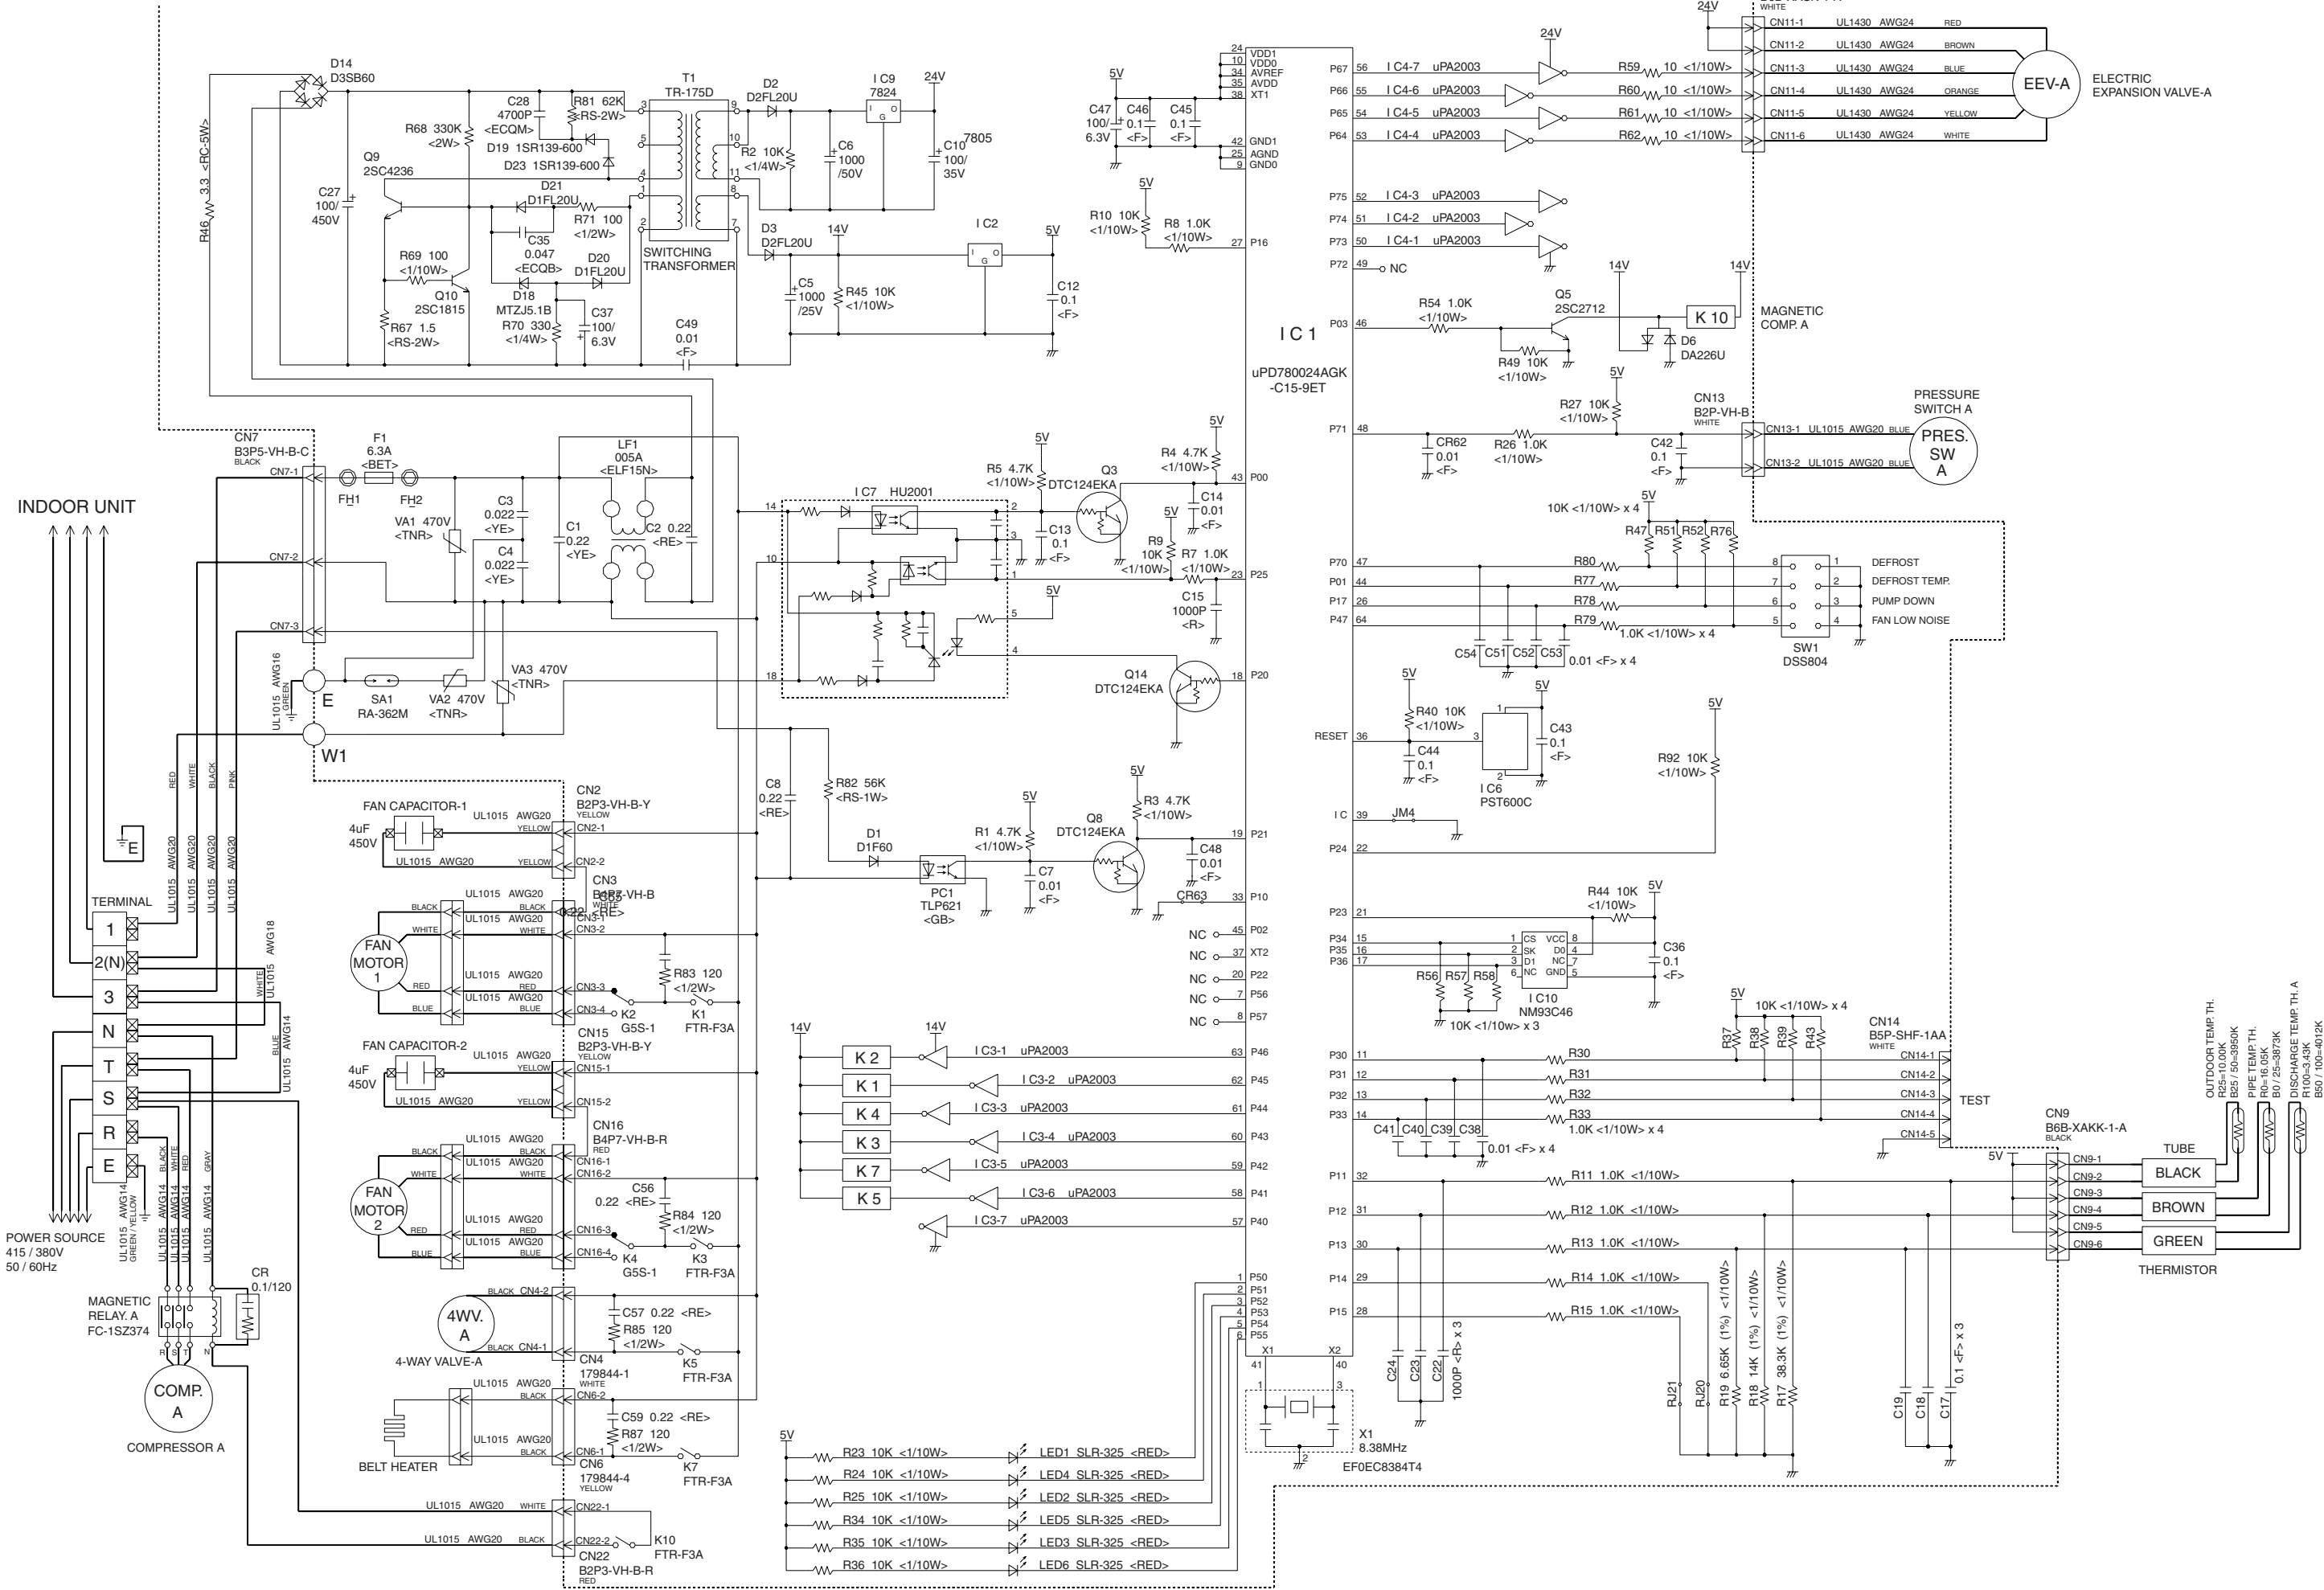


ERROR DISPLAY

CAUTION

Supply power to the crankcase heater for at least 12 hours before the start of operation in winter.

- Stop the air conditioner operation.
- Press the master control button and the fan control button simultaneously for 2 seconds or more to start the test run.

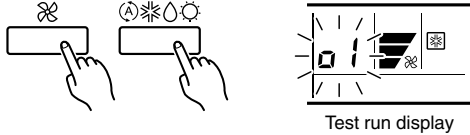


- Press the start/stop button to stop the test run.

[SELF-DIAGNOSIS]

When the error indication **E:EE** is displayed, follow the following items to perform the self-diagnosis. **E:EE** indicates an error has occurred.

1. REMOTE CONTROLLER DISPLAY

- Stop the air conditioner operation.
- Press the set temperature buttons Δ / ∇ simultaneously for 5 seconds or more to start the self-diagnosis. Refer to the following tables for the description of each error code.

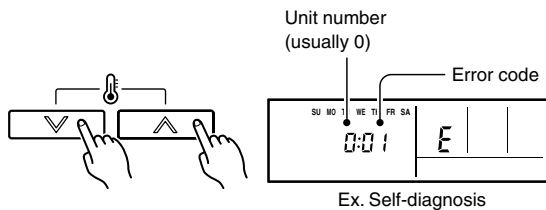

- Press the set temperature buttons Δ / ∇ simultaneously for 5 seconds or more to stop the self-diagnosis.

Error code	Error contents
00	Communication error (indoor unit ↔ remote controller)
01	Communication error (indoor unit ↔ outdoor unit)
02	Room temperature sensor open
03	Room temperature sensor short-circuited
04	Indoor heat exchanger temperature sensor open
05	Indoor heat exchanger temperature sensor short-circuited
06	Outdoor heat exchanger temperature sensor open
07	Outdoor heat exchanger temperature sensor short-circuited
08	Power source connection error


Error code	Error contents
09	Float switch operated
0A	Outdoor temperature sensor open
0b	Outdoor temperature sensor short-circuited
0c	Discharge pipe temperature sensor open
0d	Discharge pipe temperature sensor short-circuited
0E	Outdoor high pressure abnormal
0F	Discharge pipe temperature abnormal
11	Model abnormal
12	Indoor fan abnormal
13	Outdoor signal abnormal
14	Outdoor EEPROM abnormal

2. OUTDOOR UNIT LEDS

Heat & Cool model (reverse cycle) only

When a malfunction occurs in the outdoor unit, the LEDs on the circuit board light to indicate the error. Refer to the following table for the description of each error according to the LEDs.

LED layout

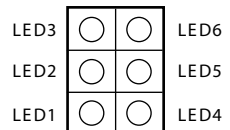


Error contents	LED1	LED2	LED3	LED4	LED5	LED6
Signal abnormal	—	—	×	○	×	×
Indoor unit abnormal	—	—	×	×	○	×
Discharge pipe temperature abnormal	—	—	×	×	×	○
Outdoor heat exchanger temperature abnormal	—	—	×	×	○	○
Outdoor temperature abnormal	—	—	×	○	×	○
Power source connection error	—	—	○	×	×	×
EEPROM abnormal	—	—	○	○	○	○
Outdoor high pressure abnormal	○	—	—	—	—	—
Discharge pipe temperature abnormal	—	○	—	—	—	—

○: 0.5s ON/0.5s OFF (flash) ×: OFF
 ◎: 0.1s ON/0.1s OFF (flash) —: Indefinite


When the fault is cleared, the LED lamp goes off. However, for discharge pipe temperature abnormal and high pressure abnormal, the LED lamp lights continuously for 24 hours, as long as the power is not turned off.

DISASSEMBLY ILLUSTRATION (Indoor Unit)


Models : RD-60CC
RD-60HC
RD-60EC
RD-60TC

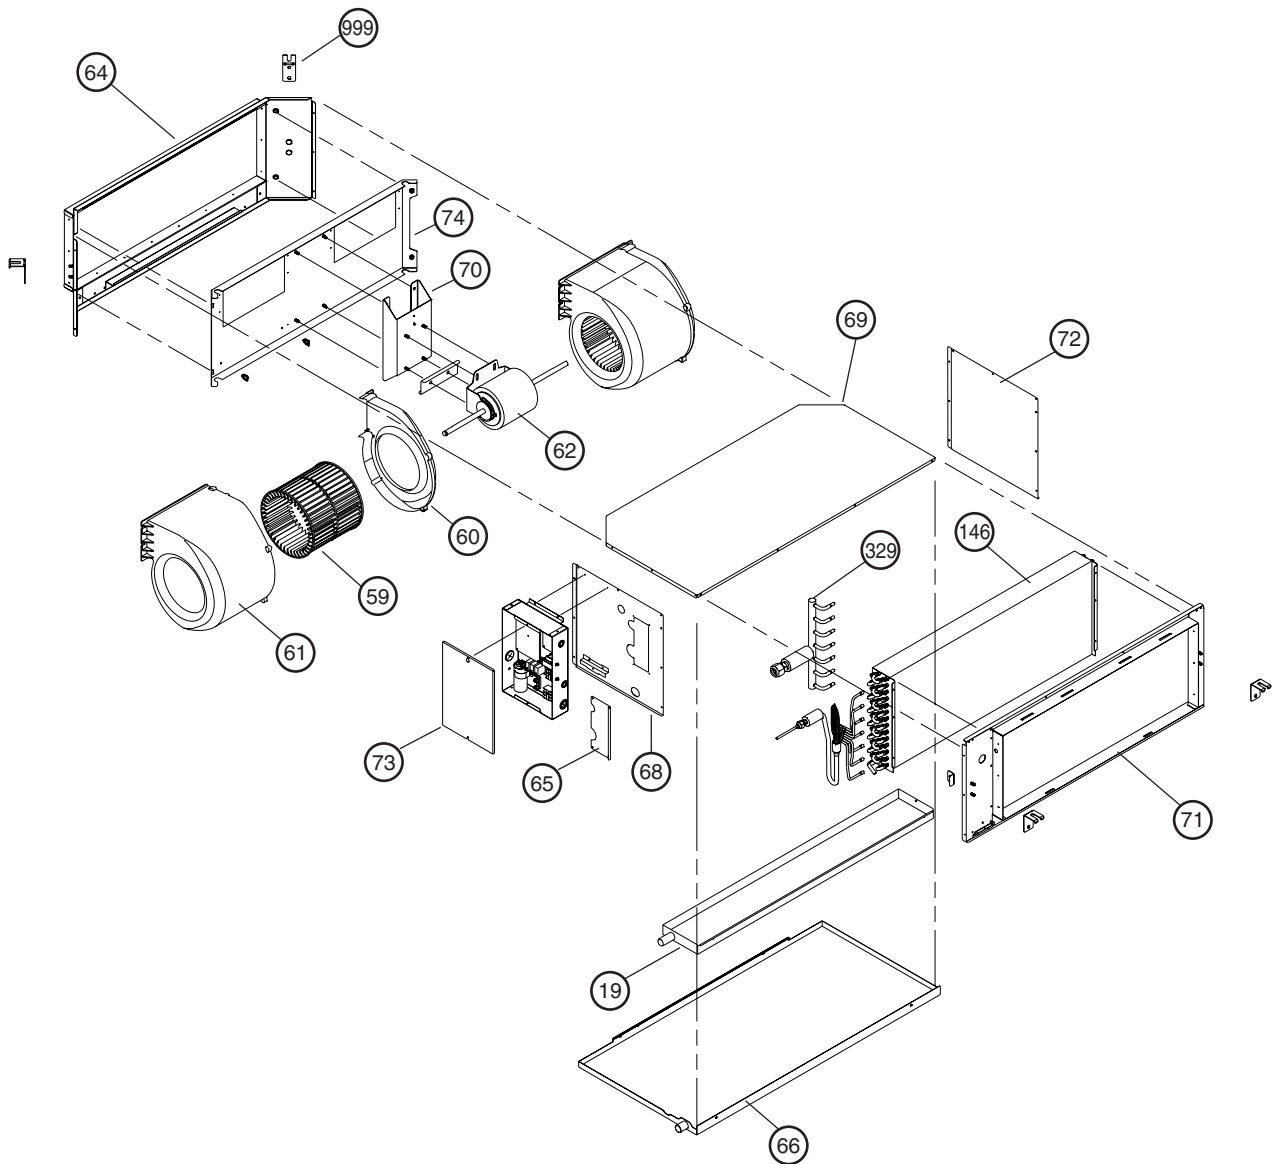


**Models : RD-60CC
RD-60HC
RD-60EC
RD-60TC**

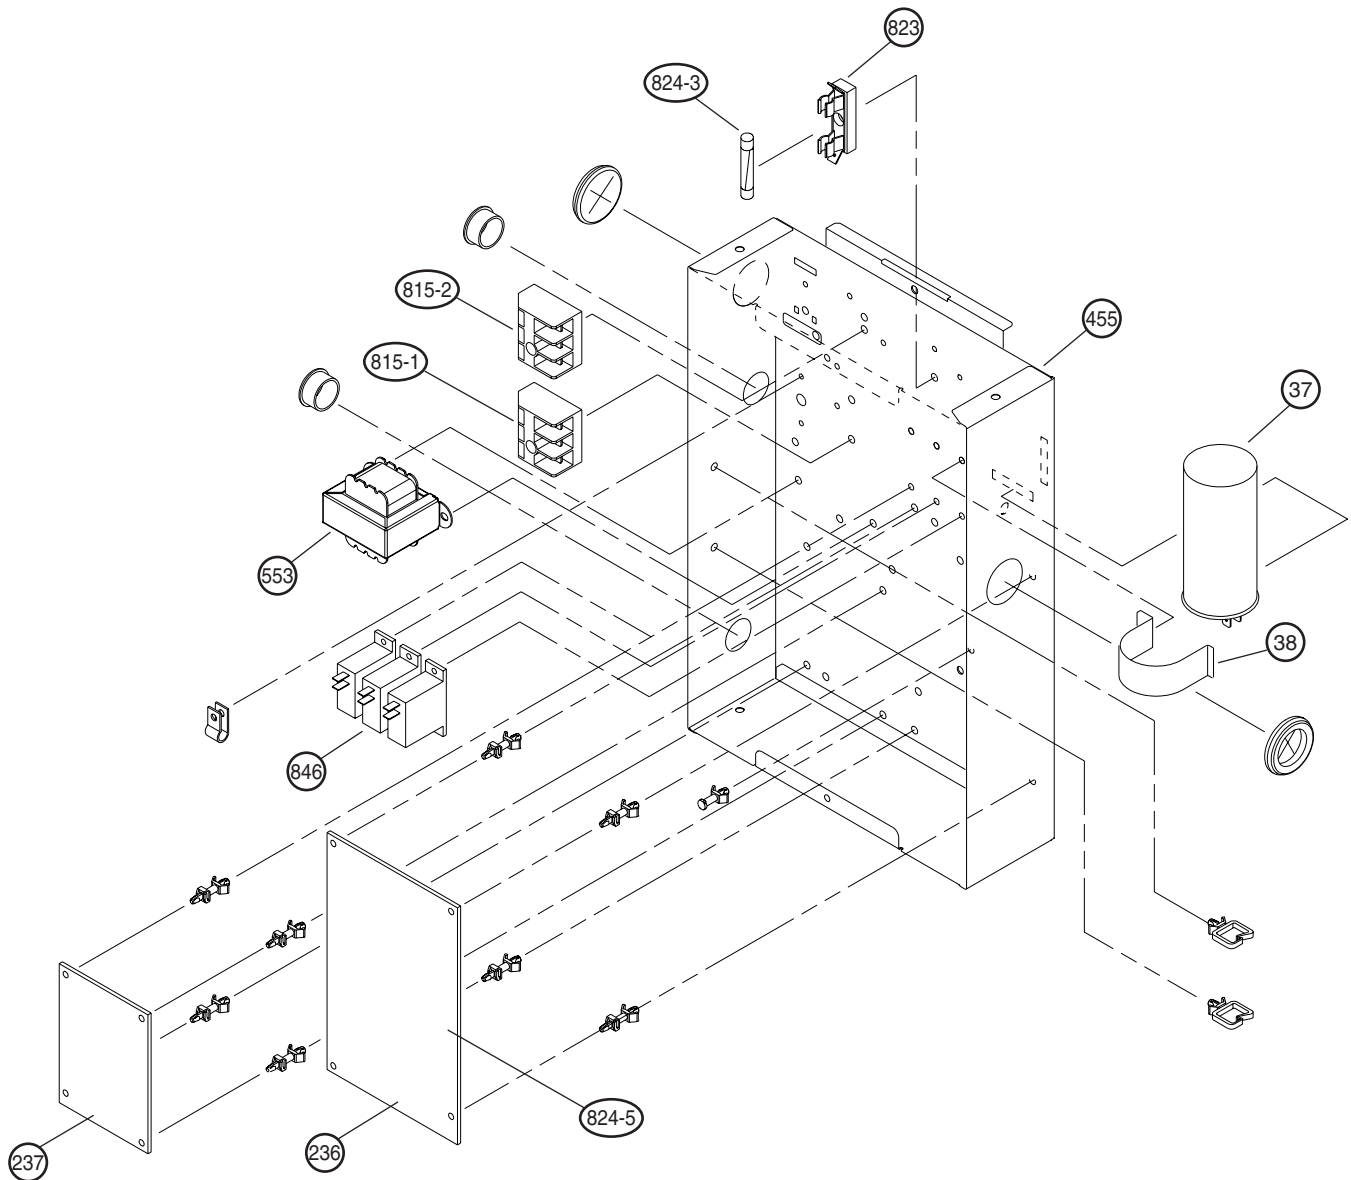


Models : ROD-60CB
ROD-60HB
RO-60EB
RO-60TB

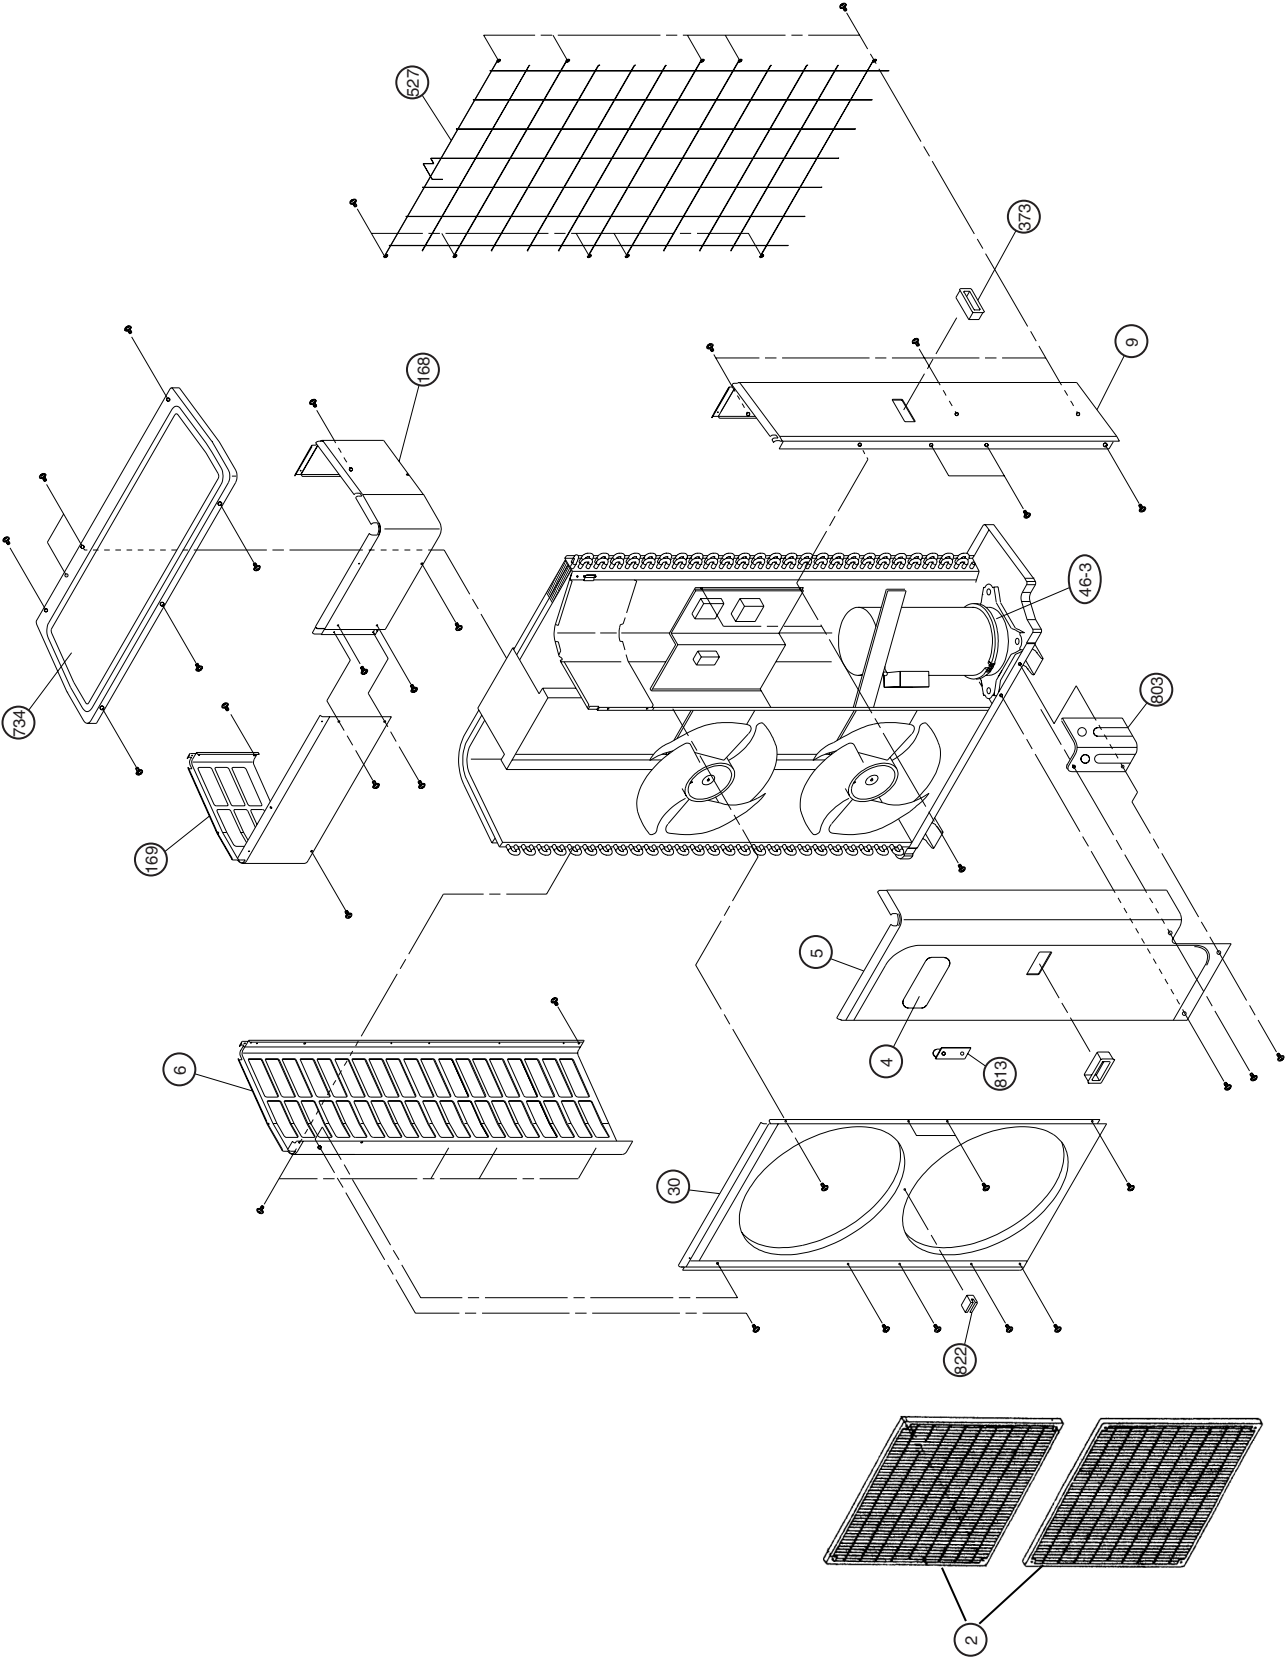

Models : ROD-60CB
 ROD-60HB
 RO-60EB
 RO-60TB

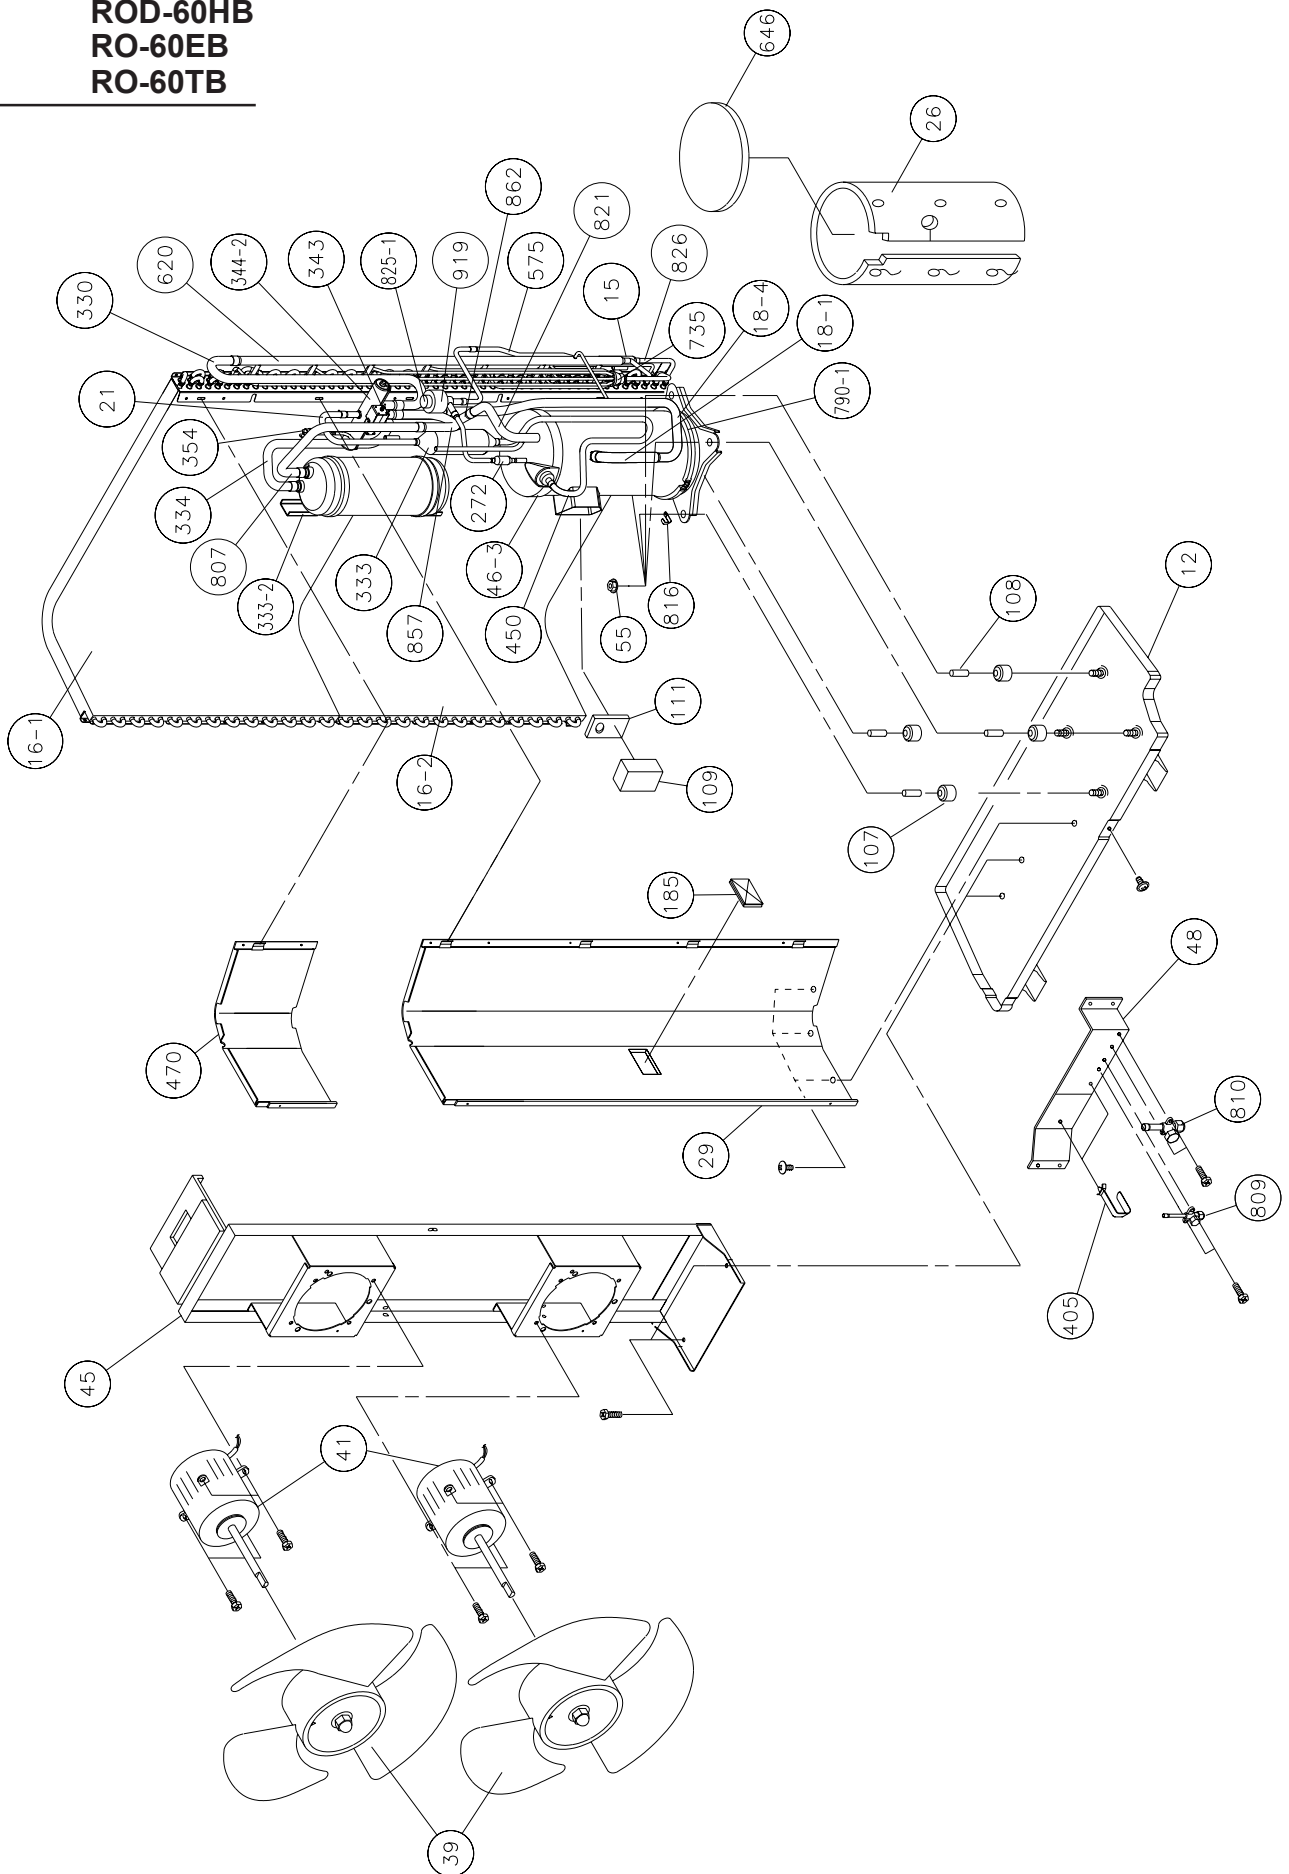

Models : ROD-60CB
ROD-60HB
RO-60EB
RO-60TB

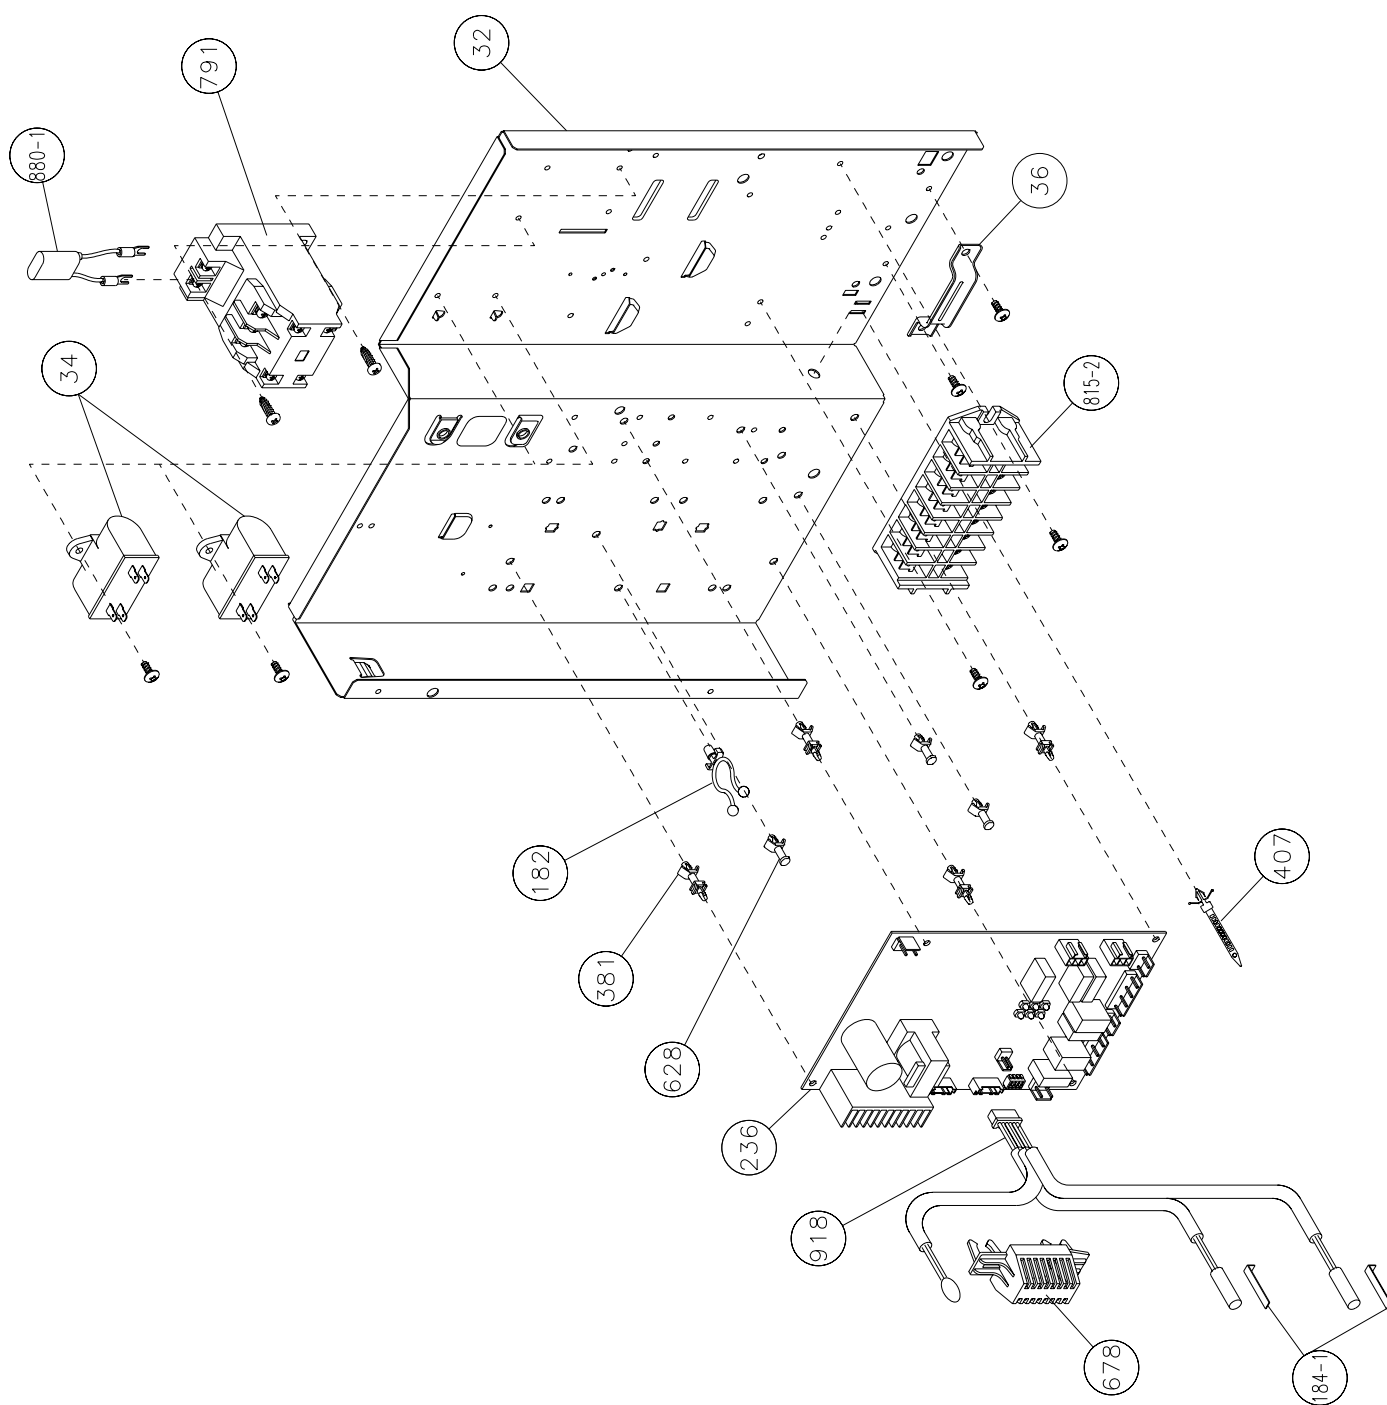

PARTS LIST (Indoor unit)

Ref. No.	Description	Parts No.				Ord. Q'ty
		RD-60CC	RD-60HC	RD-60EC	RD-60TC	
19	DRAIN PAN ASSY PRINTED	9372047026	9372047026	9372047026	9372047026	
37	CAPACITOR, PLASTIC	9704436146	9704436146	9704436146	9704436146	
38	CAPACITOR CLAMP	9308114006	9308114006	9308114006	9308114006	
59	SIROCCO FAN	9372059012	9372059012	9372059012	9372059012	
60	CASING B	9372058015	9372058015	9372058015	9372058015	
61	CASING A	9372057018	9372057018	9372057018	9372057018	
62	MOTOR, INDUCT	9601688013	9601688013	9601688013	9601688013	
64	KIT (PANEL FRONT SUB ASSY)	9372637012	9372637012	9372637012	9372637012	
65	KIT (PANEL MAINTENANCE SUB ASSY)	not available	not available	not available	not available	
66	DRAIN PAN SUB ASSY	9372053003	9372053003	9372053003	9372053003	
68	KIT (PANEL RIGHT SUB ASSY)	9372916018	9372916018	9372916018	9372916018	
69	PLATE TOP SUB ASSY	9372576014	9372576014	9372576014	9372576014	
71	KIT (PANEL REAR SUB ASSY)	9372636015	9372636015	9372636015	9372636015	
70	BRACKET MOTOR ASSY	9372037003	9372037003	9372037003	9372037003	
72	KIT (PANEL LEFT SUB ASSY)	9372581018	9372581018	9372581018	9372581018	
73	COVER BOX	9372061008	9372061008	9372061008	9372061008	
74	PANEL FAN ASSY	9372035009	9372035009	9372035009	9372035009	
146	EVAPORATOR ASSY	9372585016	9372585016	9372585016	9372585016	
236	POWER PCB ASSY	9705271029	9705271012	9705271029	9705271012	
237	MAIN PCB ASSY	9705389021 (EZ-00304WSE-C)	9705389014 (EZ-003SHSE-C)	9705389021 (EZ-00304WSE-C)	9705389014 (EZ-003SHSE-C)	
329	DISTRIBUTOR ASSY	9372587010	9372587010	9372587010	9372587010	
455	CONTROL BOX ASSY	9372536001	9372536001	9372536001	9372536001	
553	TRANSFORMER (POWER)	9704129017	9704129017	9704129017	9704129017	
815-1	TERMINAL 3P	9306489045	9306489045	9306489045	9306489045	
815-2	TERMINAL 3P	9703345012	9703345012	9703345012	9703345012	
823	FUSE HOLDER	0501454012	0501454012	0501454012	0501454012	
824-3	FUSE	0600222512	0600222512	0600222512	0600222512	
824-5	FUSE	0600315023	0600315023	0600315023	0600315023	
846	RELAY	9702100018	9702100018	9702100018	9702100018	
999	HOOK METAL	not available	not available	not available	not available	
---	THERMO. SPRING-A	313728262708	313728262708	313728262708	313728262708	
---	PIPE THERMISTOR	9703297113	9703297113	9703297113	9703297113	
---	ROOM THERMISTOR	9703299216	9703299216	9703299216	9703299216	
---	REMOCON ASSY	9372266021	9372266014	9372266021	9372266014	

OUTDOOR UNIT

When you order parts, please make a photocopy of this page and fill the number of the parts in the "Order" column.

Ref. No.	Description	Part No.	Ord. Q'ty	Ref. No.	Description	Part No.	Ord. Q'ty
		ROD-60CB				ROD-60CB	
2	Fan Cover	9352159015		184-1	Thermo. Spring -A	313728262708	
4	Emblem-Rear	9361328006		185	Rubber Bushing	313005066051	
5	Cabinet-A, Painted	9352146015		272	Strainer Assy	9354139008	
6	Cabinet-C, Painted	9352149016		333-2	Accumulator	9371615011	
9	Cabinet-B, Painted	9352147012		334	Suction Pipe-B	9352287008	
12	Base Assy, Painted	9352136016		373	Grip	9352157004	
15	Dryer	9368111014		405	Clamp No. 1763	313816345304	
16-1	Condenser-A Assy	9369546006		407	Clamp (Cable) No. 1259	313739340109	
16-2	Condenser-B Assy	9369547003		450	Discharge Pipe A	9370951080	
18-1	Suction Pipe-A	9364513003		470	Separate Wall-B Assy	9361310001	
18-4	Suction Pipe	9364054001		527	Protection Net	9361730007	
26	Compressor Cover-A	9370774030		620	Inlet Pipe (Condenser) Assy	9361558007	
29	Separate Wall Assy	9355277013		646	Compressor Cover-B	9370774047	
30	Blower Cover, Painted	9352151019		678	Bracket (Thermistor)	9352164019	
32	Control Box Metal	9352134012		734	Cabinet Top Plate	9352161018	
34	Capacitor (Fan Motor)	9704305015		735	Distributor Assy	9361561007	
36	Cord Holder Metal	9356934007		790-1	Belt Heater-A	9361140042	
39	Propeller Fan Assy	9366378013		791	Magnetic Relay	9900078010	
41	Fan Motor Assy	9600832028		803	Cabinet-D, Painted	9352150012	
45	Bracket (Motor) Assy	9371639017		807	Inlet Pipe (Accumulator)	9352285004	
46-3	Compressor Assy	9370067002		809	Ball Valve-A	9371799049	
48	Bracket (Coupler) Assy	9355281010		810	Ball Valve-B	9371799056	
55	Special Nut M8	9355091008		813	Cabinet Hook	9352148002	
107	Rubber Seat-A (For Comp.)	9364084008		815-2	Terminal 8P	9363276022	
108	Sleeve-A (For Comp.)	9364085005		816	Wire Clamp Metal	313584219902	
109	Terminal Cover (For Comp.)	9364087009		822	Fan Cover Fixture-A	9352158018	
111	Terminal Packing (For Comp.)	9364086002		826	Condensing Pipe-B	9353215000	
168	Cabinet-E, Painted	9361312029		880-1	Network	9700987017	
169	Cabinet-F, Painted	9361311022		918	Thermistor Assembly	9900129019	
182	Clamp No.249	313361271505					

OUTDOOR UNIT

When you order parts, please make a photocopy of this page and fill the number of the parts in the "Order" column.

Ref. No.	Description	Part No.	Ord. Q'ty	Ref. No.	Description	Part No.	Ord. Q'ty
		ROD-60HB				ROD-60HB	
2	Fan Cover	9352159015		344-2	4-Way Valve	9353532008	
4	Emblem-Rear	9361328006		354	Pressure Switch	9704045003	
5	Cabinet-A, Painted	9352146015		373	Grip	9352157004	
6	Cabinet-C, Painted	9352149016		381	Locking Spacer	313209391506	
9	Cabinet-B, Painted	9352147012		405	Clamp No. 1763	313816345304	
12	Base Assy, Painted	9352136016		407	Clamp (Cable) No. 1259	313739340109	
15	Dryer	9368111014		450	Discharge Pipe A	9368338008	
16-1	Condenser-A Assy	9371389103		470	Separate Wall-B Assy	9361310001	
16-2	Condenser-B Assy	9371389097		527	Protection Net	9361730007	
18-1	Suction Pipe-A	9364513003		575	Condensing Pipe C	9363460001	
18-4	Suction Pipe	9364054001		620	Inlet Pipe (Condenser) Assy	9361558007	
21	Discharge Pipe-B Assy	9368331009		628	Locking Spacer-B	313005446558	
26	Compressor Cover-A	9370774030		646	Compressor Cover-B	9370774047	
29	Separate Wall Assy	9355277013		678	Bracket (Thermistor)	313557406106	
30	Blower Cover, Painted	9352151019		734	Cabinet Top Plate	9352161018	
32	Control Box Metal	9352134012		735	Distributor Assy	9361561007	
34	Capacitor (Fan Motor)	9704305015		790-1	Belt Heater-A	9361140042	
36	Cord Holder Metal	9356934007		791	Magnetic Relay	9900078010	
39	Propeller Fan Assy	9366378013		803	Cabinet-D, Painted	9352150012	
41	Fan Motor Assy	9600832028		807	Inlet Pipe (Accumulator) A	9363458008	
45	Bracket (Motor) Assy	9371639017		809	Ball Valve-A	9371799049	
46-3	Compressor Assy	9370067002		810	Ball Valve-B	9357982007	
48	Bracket (Coupler) Assy	9355281010		813	Cabinet Hook	9352148002	
55	Special Nut M8	9355091008		815-2	Terminal 8P	9363276022	
107	Rubber Seat-A (For Comp.)	9364084008		816	Wire Clamp Metal	313584219902	
108	Sleeve-A (For Comp.)	9364085005		821	Joint Pipe (Valve-B)	9353307002	
109	Terminal Cover (For Comp.)	9364087009		822	Fan Cover Fixture-A	9352158018	
111	Terminal Packing (For Comp.)	9364086002		825-1	Expansion Valve	9900170028	
168	Cabinet-E, Painted	9361312029		826	Condensing Pipe-B	9353215000	
169	Cabinet-F, Painted	9361311022		857	Inlet Pipe (Accumulator) B	9363459005	
182	Clamp No.249	313361271505		862	Valve-B Coupl. Pipe	9353309006	
184-1	Thermo. Spring -A	313728262708		880-1	Network	9700987017	
185	Rubber Bushing	313005066051		918	Thermistor Assembly	9900129019	
236	Controller PCB Assy	9704764096		919	Expansion Valve Coil	9900172015	
272	Strainer Assy	9354139008					
330	Inlet Pipe (Cond.)-A	9361573000					
333	Accumulator	9350363018					
333-2	Accumulator(B)	9371615011					
334	Suction Pipe-B	9352287008					
343	Solenoid Coil	9359616108					

OUTDOOR UNIT

When you order parts, please make a photocopy of this page and fill the number of the parts in the "Order" column.

Ref. No.	Description	Part No.	Ord. Q'ty	Ref. No.	Description	Part No.	Ord. Q'ty
		RO-60EB				RO-60EB	
2	Fan Cover	9352159015		184-1	Thermo. Spring -A	313728262708	
4	Emblem-Rear	9361328006		185	Rubber Bushing	313005066051	
5	Cabinet-A, Painted	9352146015		272	Strainer Assy	9354139008	
6	Cabinet-C, Painted	9352149016		333-2	Accumulator(B)	9362425001	
9	Cabinet-B, Painted	9352147012		334	Suction Pipe-B	9362557009	
12	Base Assy, Painted	9352136016		373	Grip	9352157004	
15	Dryer	9368111014		381	Locking Spacer	313209391506	
16-1	Condenser-A Assy	9366230007		405	Clamp No. 1763	313816345304	
16-2	Condenser-B Assy	9366228004		407	Clamp (Cable) No. 1259	313739340109	
18-1	Suction Pipe-A	9364513003		450	Discharge Pipe A	9368338008	
18-4	Suction Pipe	9364054001		470	Separate Wall-B Assy	9361310001	
26	Compressor Cover-A	9364088006		527	Protection Net	9361730007	
29	Separate Wall Assy	9355277013		620	Inlet Pipe (Condenser) Assy	9366227007	
30	Blower Cover, Painted	9352151019		646	Compressor Cover-B	9364089003	
32	Control Box Metal	9352134012		678	Bracket (Thermistor)	313557406106	
34	Capacitor (Fan Motor)	9704305015		734	Cabinet Top Plate	9352161018	
36	Cord Holder Metal	9356934007		735	Distributor Assy	9366226000	
39	Propeller Fan Assy	9366378013		790-1	Belt Heater-A	9361140042	
41	Fan Motor Assy	9600832028		791	Magnetic Relay	9900078010	
45	Bracket (Motor) Assy	9371639017		803	Cabinet-D, Painted	9352150012	
46-3	Compressor Assy	9367377008		807	Inlet Pipe (Accumulator)	9362558006	
48	Bracket (Coupler) Assy	9355281010		809	Ball Valve-A	9371799018	
55	Special Nut M8	9355091008		810	Ball Valve-B	9371799032	
107	Rubber Seat-A (For Comp.)	9364084008		813	Cabinet Hook	9352148002	
108	Sleeve-A (For Comp.)	9364085005		815-2	Terminal 8P	9363276022	
109	Terminal Cover (For Comp.)	9364087009		816	Wire Clamp Metal	313584219902	
111	Terminal Packing (For Comp.)	9364086002		822	Fan Cover Fixture-A	9352158018	
168	Cabinet-E, Painted	9361312029		826	Condensing Pipe-B	9353215000	
169	Cabinet-F, Painted	9361311022		880-1	Network	9700987017	
182	Clamp No.249	313361271505		918	Thermistor Assembly	9900129019	





OUTDOOR UNIT

When you order parts, please make a photocopy of this page and fill the number of the parts in the "Order" column.




Ref. No.	Description	Part No.	Ord. Q'ty	Ref. No.	Description	Part No.	Ord. Q'ty
		RO-60TB				RO-60TB	
2	Fan Cover	9352159015		344-2	4-Way Valve	9353532008	
4	Emblem-Rear	9361328006		354	Pressure Switch	9704045003	
5	Cabinet-A, Painted	9352146015		373	Grip	9352157004	
6	Cabinet-C, Painted	9352149016		381	Locking Spacer	313209391506	
9	Cabinet-B, Painted	9352147012		405	Clamp No. 1763	313816345304	
12	Base Assy, Painted	9352136016		407	Clamp (Cable) No. 1259	313739340109	
15	Dryer	9368111014		450	Discharge Pipe A	9368338008	
16-1	Condenser-A Assy	9371389103		470	Separate Wall-B Assy	9361310001	
16-2	Condenser-B Assy	9371389097		527	Protection Net	9361730007	
18-1	Suction Pipe-A	9364513003		575	Condensing Pipe C	9372225035	
18-4	Suction Pipe	9364054001		620	Inlet Pipe (Condenser) Assy	9361558007	
21	Discharge Pipe-B Assy	9368331009		628	Locking Spacer-B	313005446558	
26	Compressor Cover-A	9370774030		646	Compressor Cover-B	9370774047	
29	Separate Wall Assy	9355277013		678	Bracket (Thermistor)	313557406106	
30	Blower Cover, Painted	9352151019		734	Cabinet Top Plate	9352161018	
32	Control Box Metal	9352134012		735	Distributor Assy	9361561007	
34	Capacitor (Fan Motor)	9704305015		790-1	Belt Heater-A	9361140042	
36	Cord Holder Metal	9356934007		791	Magnetic Relay	9900078010	
39	Propeller Fan Assy	9366378013		803	Cabinet-D, Painted	9352150012	
41	Fan Motor Assy	9600832028		807	Inlet Pipe (Accumulator) A	9368341008	
45	Bracket (Motor) Assy	9371639017		809	Ball Valve-A	9371799018	
46-3	Compressor Assy	9367377008		810	Ball Valve-B	9371799032	
48	Bracket (Coupler) Assy	9355281010		813	Cabinet Hook	9352148002	
55	Special Nut M8	9355091008		815-2	Terminal 8P	9363276022	
107	Rubber Seat-A (For Comp.)	9364084008		816	Wire Clamp Metal	313584219902	
108	Sleeve-A (For Comp.)	9364085005		821	Joint Pipe (Valve-B)	9368340001	
109	Terminal Cover (For Comp.)	9364087009		822	Fan Cover Fixture-A	9352158018	
111	Terminal Packing (For Comp.)	9364086002		825-1	Expansion Valve	9900170028	
168	Cabinet-E, Painted	9361312029		826	Condensing Pipe-B	9353215000	
169	Cabinet-F, Painted	9361311022		857	Inlet Pipe (Accumulator) B	9363459005	
182	Clamp No.249	313361271505		862	Valve-B Coupl. Pipe	9353309006	
184-1	Thermo. Spring -A	313728262708		880-1	Network	9700987017	
185	Rubber Bushing	313005066051		918	Thermistor Assembly	9900129019	
236	Controller PCB Assy	9704764201		919	Expansion Valve Coil	9900172015	
272	Strainer Assy	9368343002					
330	Inlet Pipe (Cond.)-A	9361573000					
333	Accumulator	9350363018					
333-2	Accumulator(B)	9371615011					
334	Suction Pipe-B	9362557009					
343	Solenoid Coil	9359616108					

STANDARD ACCESSORIES

INDOOR UNIT ACCESSORIES

Name and Shape	Q'ty	Application
Special nut A (large flange) 	4	For suspending the indoor unit from ceiling
Special nut B (small flange) 	4	
Coupler heat insulation (large) 	1	For indoor side pipe joint (large pipe)
Coupler heat insulation (small) 	1	For indoor side pipe joint (small pipe)
Binder (small) 	1	For fixing the remote controller cord
Remote controller 	1	
Tapping screw (flush heads) 	2	For installing the remote controller
Remote controller cord 	1	For connecting the remote controller

OUTDOOR UNIT ACCESSORIES

Name and Shape	Q'ty	Application
Power cap 	1	For power supply cord installation
Auxiliary pipe assembly 	1	For wiring conduit (gas side) connection (May not be supplied, depending on the model)
Edge cover 	1	For wiring conduit installation hole edge protection
Tapping screw 	2	¥For cabinet A and cabinet D mounting (1) ¥Spare (1)
Binder 	1	For power supply cord binding
Putty 	1	For sealing
Coupler heat insulation 	1	For outdoor side pipe joint
Pipe (drain) 	2	For outdoor unit drain piping work (May not be supplied, depending on the model.)
Flexible tube 	2	
Cap (drain) 	2	

